

EE140-KA-OMI-010/E110 T827H

TECHNICAL MANUAL

**OPERATION AND MAINTENANCE INSTRUCTIONS
WITH PARTS LIST**

ORGANIZATIONAL AND DEPOT

Full Table of Contents

**RADIO TRANSMITTER T-827H/URT
01A228010-01**

Chapter 3

STEWART-WARNER ELECTRONICS
N00039-79-C-0109

Functional Description

Each transmittal of this document outside of the Department of Defense must have approval of the issuing Service.

Chapter 6

Published by direction of Commander, Naval Electronic Systems Command.

Corrective Maint

**31 OCTOBER 1983
CHANGE 1 28 FEBRUARY 1984
EE140-KA-OMI-01A/E110-T827**



1. The first part of the document is a list of names and addresses of the members of the committee.



TABLE OF CONTENTS

Chapter		Page
	LIST OF ILLUSTRATIONS	ix
	LIST OF TABLES	xv
1	GENERAL INFORMATION AND SAFETY PRECAUTIONS	1-1
	1-0. Safety Precautions	1-1
	1-1. Introduction	1-1
	1-3. Equipment Description	1-1
	1-4. General	1-1
	1-5. Physical Characteristics	1-2
	1-6. Electrical Characteristics	1-2
	1-7. Reference Designations	1-2
	1-8. Reference Data	1-2
	1-10. Equipment, Accessories and Documents Supplied	1-2
	1-12. Equipment and Publications Required but not Supplied	1-2
	1-14. Nonstandard Abbreviations	1-2
	1-16. Factory and Field Changes	1-2
2	OPERATION	2-1
	2-1. Introduction	2-1
	2-3. Operating Controls and Indicators	2-1
	2-5. Operating Procedures	2-1
	2-7. Normal and Emergency Shutdown Procedures	2-1
	2-8. Interference and Emergency Operation	2-1
	2-11. Maintenance Controls and Connectors	2-1
	2-13. Operator's Maintenance Procedure	2-1
3	FUNCTIONAL DESCRIPTION	3-1
	3-1. Introduction	3-1
	3-3. Overall Functional Description	3-1
	3-4. General	3-1
	3-5. Input Signal Routing	3-1
	3-6. Line Level Meters	3-1
	3-7. Mode Selector	3-1
	3-8. IF Amplifier	3-1
	3-9. RF Translator	3-5
	3-10. RF Amplifier	3-5
	3-11. Frequency Standard	3-5
	3-12. Frequency Generator	3-5
	3-13. Frequency Synthesizer	3-5
	3-18. Code Generator Assembly	3-6
	3-19. Power Supply Assembly	3-6
	3-20. Major Functional Description	3-6
	3-21. General	3-6
	3-22. Normal Audio Processing - Voice Modes	3-7
	3-24. Normal LSB Modes	3-7
	3-26. Normal USB Modes	3-7

TABLE OF CONTENTS (CONTINUED)

Chapter		Page	
3 (Cont.)	3-28.	Data Audio Processing	3-8
	3-29.	Data Tone Inputs	3-8
	3-31.	Audio Control A2A21A20	3-8
	3-37.	Audio Mode Gating and Modulation	3-10
	3-43.	Tone Generation and Modulation (RATT Modes)	3-10
	3-51.	CW/AM/SSB Carrier Reinsertion	3-11
	3-59.	IF Amplification and Level Control	3-12
	3-65.	IF-to-RF Conversion	3-13
	3-74.	RF Amplification	3-14
	3-81.	Frequency Synthesis	3-16
	3-86.	Standard Frequency Generation and Distribution	3-19
	3-95.	Frequency Generator	3-21
	3-111.	CW, RATT, DATA and PTT Keying Control	3-24
	3-115.	Power Distribution	3-24
	3-120.	Tuning	3-26
	3-126.	Circuit Level Descriptions	3-29
	3-127.	General	3-29
	3-128.	Transmitter Case A1	3-29
	3-129.	Filter Box Assembly A1A1	3-29
	3-130.	Transmitter Main Frame A2	3-29
	3-141.	Audio Interconnect Assembly A2A21	3-56
	3-144.	Audio Processors A2A21A18/19	3-57
	3-158.	Mode Selector Assembly A2A1	3-60
	3-165.	RF Amplifier Assembly A2A4	3-61
	3-170.	Frequency Standard Assembly A2A5	3-62
	3-188.	Translator/Synthesizer Assembly A2A6	3-65
	3-238.	Power Supply Assembly A2A8	3-75
	3-239.	RATT Tone Generator Assembly A2A9	3-75
	3-245.	Meter Amplifier Assemblies A2A10 and A2A11	3-76
	3-246.	IF Amplifier Assembly A2A12	3-76
	3-248.	Handset Filter Assembly A2A14	3-76
	3-249.	IF Filter Assembly A2A15	3-76
	4	SCHEDULED MAINTENANCE	4-1
		4-1.	Introduction
	4-3.	Scheduled Maintenance Action Index	4-1
	4-5.	Preventive Maintenance Procedures	4-1
	4-7.	Scheduled Performance Tests	4-1
	4-8.	Safety Precautions	4-1
	4-9.	Procedures	4-1
5	TROUBLESHOOTING	5-1	
	5-1.	Introduction	5-1
	5-2.	General	5-1
	5-3.	Troubleshooting Data	5-1
	5-4.	Repair Functions	5-1
	5-5.	Alignment and Checkout	5-1
	5-6.	Troubleshooting Index	5-1
	5-8.	Relay and Indicator Lamp Indices	5-1

TABLE OF CONTENTS (CONTINUED)

Chapter		Page	
5 (Cont.)	5-10. Protective Devices Index	5-1	
	5-12. Maintenance Turn-On Procedure	5-1	
	5-14. Troubleshooting Procedures	5-2	
	5-16. Troubleshooting Diagrams	5-2	
	5-17. General	5-2	
	5-18. Signal Flow Diagrams	5-2	
	5-19. Control Diagram	5-2	
	5-20. Power Distribution Diagrams	5-2	
	5-21. Fault Logic Diagrams	5-2	
	5-22. Maintenance Schematic Diagrams	5-2	
	6	CORRECTIVE MAINTENANCE	6-1
		6-1. Introduction	6-1
	SECTION I - ADJUSTMENTS AND ALIGNMENTS	6-1	
	6-4. General	6-1	
	6-6. Electronic Adjustments and Alignments	6-1	
	6-7. Procedures	6-1	
	6-8. Test Equipment Required	6-1	
	6-9. Mechanical Adjustments	6-1	
	6-10. Drive Chain Adjustment	6-1	
	6-11. Coupler Adjustment	6-2	
	SECTION II - REPAIR	6-72	
	6-12. General	6-72	
	6-14. Inspection	6-72	
	6-15. Repair Methods	6-72	
	6-16. Wire, Cable, and Connectors	6-72	
	6-17. Printed Wiring Conductors	6-76	
	6-18. Component Replacement	6-76	
	6-19. Cleaning	6-76	
	6-20. Transmitter Case A1	6-76	
	6-21. General	6-76	
	6-22. Removal	6-76	
	6-23. Disassembly	6-77	
	6-24. Inspection	6-77	
	6-25. Repair	6-77	
	6-26. Cleaning	6-77	
	6-27. Reassembly and Installation	6-77	
	6-28. Adjustment	6-77	
	6-29. Checkout	6-77	
	6-30. Transmitter Main Frame A2 and Hard Wired Assemblies	6-77	
	6-31. General	6-77	
	6-32. Removal	6-77	
	6-33. Disassembly	6-78	
	6-34. Hard Wired Assemblies	6-78	
	6-35. Tuning Chain-Drive Mechanism	6-79	
	6-36. Inspection	6-79	

TABLE OF CONTENTS (CONTINUED)

Chapter		Page
6	6-37. Repair	6-79
(Cont.)	6-38. Cleaning	6-79
	6-39. Reassembly	6-79
	6-40. Hard Wired Assemblies	6-79
	6-41. Tuning Chain-Drive Mechanism	6-80
	6-42. Installation	6-80
	6-43. Adjustments	6-80
	6-44. Checkout	6-80
	6-45. Mode Selector Assembly A2A1	6-80
	6-46. General	6-80
	6-47. Removal	6-80
	6-48. Disassembly	6-80
	6-49. Inspection	6-81
	6-50. Repair	6-81
	6-51. Cleaning	6-81
	6-52. Reassembly	6-81
	6-53. Adjustment	6-81
	6-54. Installation	6-81
	6-55. RF Amplifier Assembly A2A4	6-81
	6-56. General	6-81
	6-57. Vacuum Tube Removal and Replacement	6-81
	6-58. Removal	6-81
	6-59. Disassembly	6-82
	6-61. Inspection	6-86
	6-62. Repair	6-86
	6-63. Cleaning	6-86
	6-64. Reassembly	6-86
	6-65. Adjustment	6-88
	6-66. Installation	6-88
	6-67. Frequency Standard Assembly A2A5	6-88
	6-68. General	6-88
	6-69. Removal	6-88
	6-70. Disassembly	6-88
	6-71. Inspection	6-89
	6-72. Repair	6-89
	6-73. Cleaning	6-89
	6-74. Reassembly	6-89
	6-75. Adjustment	6-89
	6-76. Installation	6-89
	6-77. Translator/Synthesizer Assembly A2A6	6-89
	6-78. General	6-89
	6-79. Removal	6-90
	6-80. Disassembly	6-90
	6-81. Translator Subassembly A2A6A8	6-90
	6-82. Rotary Switches	6-90
	6-83. Main Connectors	6-90
	6-84. Printed Circuit Board Connectors	6-90
	6-85. Inspection	6-91
	6-86. Repair	6-91
	6-87. Cleaning	6-91
	6-88. Reassembly	6-91

TABLE OF CONTENTS (CONTINUED)

Chapter		Page	
6 (Cont.)	6-89.	Adjustment	6-91
	6-90.	Installation	6-91
	6-91.	Code Generator Assembly A2A7	6-91
	6-92.	General	6-91
	6-93.	Removal	6-91
	6-94.	Disassembly	6-93
	6-95.	Inspection	6-93
	6-96.	Repair	6-93
	6-97.	Cleaning	6-93
	6-98.	Reassembly	6-93
	6-99.	Installation and Alignment	6-93
	6-100.	Power Supply Assembly A2A8	6-93
	6-101.	General	6-93
	6-102.	RATT Tone Generator Assembly A2A9	6-93
	6-103.	General	6-93
	6-104.	Removal	6-93
	6-105.	Disassembly	6-94
	6-106.	Inspection	6-94
	6-107.	Repair	6-94
	6-108.	Cleaning	6-94
	6-109.	Reassembly	6-94
	6-110.	Installation	6-94
	6-111.	Meter Amplifier Assemblies A2A10 and A2A11	6-94
	6-112.	General	6-94
	6-113.	IF Amplifier Assembly A2A12	6-94
	6-114.	General	6-94
	6-115.	Removal	6-94
	6-116.	Disassembly	6-94
	6-117.	Inspection	6-95
	6-118.	Repair	6-95
	6-119.	Cleaning	6-95
	6-120.	Reassembly	6-95
	6-121.	Adjustment	6-95
	6-122.	Installation	6-95
6-123.	Handset and IF Filter Assemblies A2A14 and A2A15	6-95	
6-124.	General	6-95	
6-125.	Interconnect Circuit Card Assembly A2A21	6-95	
6-126.	General	6-95	
6-127.	Audio Processor Assemblies A2A21A18 and A2A21A19 and Audio Control Assembly A2A21A20	6-95	
6-128.	General	6-95	
6-129.	Removal	6-95	
6-130.	Inspection	6-96	
6-131.	Repair	6-96	
6-132.	Cleaning	6-96	
6-133.	Adjustment	6-96	
6-134.	Installation	6-96	

TABLE OF CONTENTS (CONTINUED)

Chapter		Page
7	PARTS LIST	7-1
	7-1. Introduction	7-1
	7-2. List of Assemblies	7-1
	7-3. Reference Designations	7-1
	7-5. Maintenance Parts Listing	7-1
	7-6. Parts List	7-1
	7-11. List of Common Item Descriptions	7-2
	7-12. List of Attaching Hardware	7-3
	7-13. List of Manufacturers	7-3
	7-14. Parts Location Illustrations	7-3
8	INSTALLATION	8-1
	8-1. General	8-1
	8-3. Site Selection	8-1
	8-5. Reference Publications	8-1
	8-7. Tools and Materials Required for Installation	8-1
	8-9. Unpacking and Repacking	8-1
	8-11. Installation Procedures	8-1
	8-13. Independent Shock Mounting	8-1
	8-14. Rack or Cabinet Mounting	8-1
	8-15. Bonding and Grounding	8-2
	8-17. Primary Power Requirements	8-2
	8-19. Power Supply Adaptation	8-2
	8-20. Interconnecting Cabling	8-3
	8-23. Remote RATT Transmission	8-3
	8-24. Data Transmission	8-3
	8-25. Operation Using Internal Frequency Standard	8-3
	8-26. Operation Using External Frequency Standard	8-3
	8-27. Use of Frequency Standard Output by Another Unit	8-4
	8-28. Installation Checkout	8-4
	8-29. Phase 1 - Installation Inspection and Pre-Energizing Procedures	8-4
	8-30. Phase 2 - Initial Turn-on and Preliminary Test	8-4
	8-31. Use of External Frequency Standard for Calibration	8-4
	8-32. Phase 3 - Installation Verification Test	8-5
	ALPHABETICAL INDEX	Index 1

LIST OF ILLUSTRATIONS

Number	Title	Page
1-1	Radio Transmitter T-827H/URT	1-0
1-2	Radio Transmitter T-827H/URT, Top View, Case Removed	1-3
1-3	Radio Transmitter T-827H/URT, Bottom View, Case Removed	1-4
2-1	Radio Transmitter T-827H/URT, Operating Controls, Indicators and Connectors	2-2
2-2	Detailed View of AUX/NORM and Interlock Switches	2-9
2-3	Radio Transmitter T-827H/URT, Rear Panel Connectors	2-16
3-1	Radio Transmitter T-827H/URT, Overall Functional Block Diagram ...	3-5
3-2	Frequency Synthesis and Translation, Functional Block Diagram	3-17
3-3	Radio Transmitter T-827H/URT, Tuning, Simplified Schematic Diagram	3-27
3-4	Integrated Circuit, Quadruple, 2-Input Positive NAND Gate, M38510/00104 (5400), Simplified Schematic Diagram	3-30
3-5	Integrated Circuits, Voltage Regulators, 78M05HMQB (48P226600-01), 78M20HMQB (48P226600-02), SG7815T/883B (48P226600-03), Simplified Schematic Diagram	3-31
3-6	Integrated Circuit, Hex. 1-Input Inverter Gate, M38510/00105 (5404, Simplified Schematic Diagram	3-32
3-7	Integrated Circuit, High Speed Decade counter, M38510/01307 (5490), Simplified Schematic Diagram	3-33
3-8	Integrated Circuit, Operational Amplifier, CA3140S/3 (98738/ 48P226682-01) Alt. (50097/C31312-001), Simplified Schematic Diagram	3-34
3-9	Integrated Circuit, Dual Voltage-Controlled Multivibrator, MC4324BCBJS (50097, C31357-001), Simplified Schematic Diagram ..	3-35
3-10	Integrated Circuit, Phase Detector, MC4344DCBS (98738/ 48P226446-01) Alt. MC4344BCBJS (50097/C31351-001), Logic Diagram	3-35
3-11	Integrated Circuit, Dual D-Type Edge-Triggered Flip-Flop, M38510/00205 (5474), Simplified Schematic Diagram	3-36
3-12	Integrated Circuit, 4-Bit Binary Counter, M38510/01302 (5493), Simplified Schematic Diagram	3-37
3-13	Integrated Circuit, Programmable Modulus N Decade Counter, MC4316DEBS (98738/48P226460-01) Alt. MC4316BEBJS (50097/31355-001), Functional Block Diagram	3-38
3-14	Integrated Circuit, MC12513DEBS (98738/48P226458-01) Alt. MC12513BEBJS (50097/C31358-001) Logic Diagram	3-39
3-15	Integrated Circuit, MC12514DEBS (98738/48P226459-01) Alt. MC12514BEBS (50097/C31354-001), Logic Diagram	3-40
3-16	Integrated Circuit, Programmable Decade (BCD) Counter, SNC54196J (98738/48P226449-01) Alt. SNJ54196J (50097/C31311-002), Functional Block Diagram	3-41
3-17	Integrated Circuit, Quad 2-Input NOR Gate, SNC54S02J 48P226451-01, Simplified Schematic Diagram	3-42
3-18	Integrated Circuit, Programmable Binary Counter, SNJ54197J (98738/48P226455-01) Alt. SN5541975 (50097/C31353-001), Functional Block Diagram	3-43
3-19	Integrated Circuit, Quadruple 2-Input Positive NOR Gate, M38510/00401 (5402), Simplified Schematic Diagram	3-44
3-20	Integrated Circuit, Programmed Read-Only Memory, CC4335F (48P226463-01, Simplified Schematic Diagram	3-45

LIST OF ILLUSTRATIONS (CONTINUED)

Number	Title	Page
3-21	Integrated Circuit, Precision Voltage Comparator/Buffer, M38510/10304 (LM111), Simplified Schematic Diagram	3-46
3-22	Integrated Circuit, Voltage Regulator, LM105H/883 (98738/48P226461-01) Alt. LM105H/883B (50097/C31356-001), Simplified Schematic Diagram	3-47
3-23	Integrated Circuit, Dual D-Type Edge-Triggered Flip-Flop, M38510/05101BCB (4013A), Logic Diagram	3-48
3-24	Integrated Circuit, Quadruple 2-Input AND Gate, M38510/17001BCB (4081B), Logic Diagram	3-48
3-25	Integrated Circuit M38510/10102BCB (747A), Logic Diagram	3-49
3-26	Integrated Circuit M38510/10101BCB (741A), Logic Diagram	3-49
3-27	Integrated Circuit, Hex 1-Input Inverter Gate, M38510/00108BCB (SNC54S04J), Logic Diagram	3-50
3-28	Integrated Circuit, Single Monostable Multivibrator, M38510/31403BCB (54LS122), Logic Diagram	3-51
3-29	Integrated Circuit, Programmable Divide-by-N 4-Bit Counter, BCL4522 (48P228316-01), Logic Diagram	3-52
3-30	Integrated Circuit, 32 x 8 Prom, HMI-7603-8 (98738/48P228344-01) Alt. (50097/M31310-003), Block Diagram	3-53
3-31	Integrated Circuit, 32 x 8 Prom, CC4335F (98738/48P226463-01) HMI-7602-8 (50097/M31310-002), Block Diagram	3-54
3-32	Integrated Circuit, Dual High-Frequency Differential Amplifier, CA3049T/3 (98738/48P228318-02) Alt. (50097/B04112-001 or B04112-002 or B04112-003), Schematic Diagram	3-55
4-1	Radio Transmitter T-827H/URT, Scheduled Performance Test Setup	4-7
5-1	Audio Amplification and Modulation, Normal LSB/USB, Signal Flow Diagram (3 Sheets)	5-23
5-2	RATT Tone Generator, Signal Flow Diagram	5-31
5-3	Carrier Reinsertion Signal Flow Diagram	5-33
5-4	IF Amplification and Level Control, Signal Flow Diagram	5-35
5-5	IF-to-RF Conversion, Signal Flow Diagram	5-39
5-6	RF Amplification and Level Control, Signal Flow Diagram	5-41
5-7	Standard Frequency Production and Distribution, Signal Flow Diagram	5-45
5-8	Frequency Generator A2A6A16, Signal Flow Diagram	5-49
5-9	10 kHz/1 kHz/100 Hz Synthesizer A2A6A12 and A2A6A18, Signal Flow Diagram	5-55
5-9A.	10 kHz/1 kHz/100 Hz Synthesizer A2A6A12 and A2A6A18, Signal Flow Diagram	5-56.1
5-10	100 kHz Synthesizer A2A6A17, Signal Flow Diagram	5-59
5-10A	100 kHz Synthesizer A2A6A17, Signal Flow Diagram	5-60.1
5-11	10 MHz/1 MHz Synthesizer A2A6A13, and Filter Subassembly A2A6A14, Signal Flow Diagram	5-65
5-11A	10 MHz/1 MHz Synthesizer A2A6A13, and Filter Subassembly A2A6A14, Signal Flow Diagram	5-66.1
5-12	CW, RATT, DATA and PTT Keying, Control Diagram	5-67
5-13	Primary Ac Power Distribution Diagram	5-69
5-14	+28 Vdc Power Distribution Diagram	5-71
5-15	+110 Vdc, +20 Vdc, and +5 Vdc Power Distribution Diagram	5-73

LIST OF ILLUSTRATIONS (CONTINUED)

Number	Title	Page
5-16	Normal Operation - Audio Amplification and Modulation, Voice Modes, Fault Logic Diagram (2 Sheets)	5-75
5-17	RATT Tone Generation, Fault Logic Diagram	5-79
5-18	Carrier Reinsertion, Fault Logic Diagram	5-81
5-19	IF Amplification and Level Control Fault Logic Diagram	5-83
5-20	IF-to-RF Conversion, Fault Logic Diagram	5-85
5-21	RF Amplification and Level Control, Fault Logic Diagram	5-87
5-22	Frequency Standard A2A5, Fault Logic Diagram	5-89
5-23	Frequency Generator A2A6A16, Fault Logic Diagram	5-91
5-24	10 kHz/1 kHz/100 Hz Synthesizer A2A6A18 and A2A6A12, Fault Logic Diagram	5-93
5-25	100 kHz Synthesizer A2A6A17, Fault Logic Diagram	5-95
5-26	10 MHz/1 MHz Synthesizer A2A6A13, Fault Logic Diagram	5-97
5-27	CW, RATT, DATA and PTT Keying, Fault Logic Diagram	5-99
5-28	Transmitter Case A1 and Main Frame A2, Maintenance Schematic Diagram (3 Sheets)	5-115
5-29	Mode Selector Assembly A2A1, Maintenance Schematic Diagram	5-125
5-30	RF Amplifier Assembly A2A4, Maintenance Schematic Diagram (2 Sheets)	5-133
5-31	Frequency Standard Assembly A2A5, Maintenance Schematic Diagram (2 Sheets)	5-139
5-32	Translator/Synthesizer Assembly A2A6, Maintenance Schematic Diagram	5-147
5-32A	Translator/Synthesizer Assembly A2A6, Maintenance Schematic Diagram	5-148.1
5-33	RF Translator Subassembly A2A6A8, Maintenance Schematic Diagram	5-151
5-34	10 kHz/1 kHz/100 Hz Synthesizer Subassembly (No. 2) A2A6A12, Maintenance Schematic Diagram	5-153
5-34A	10 kHz/1 kHz/100 Hz Synthesizer Subassembly (No. 2) A2A6A12, Maintenance Schematic Diagram	5-154.1
5-35	10 MHz/1 MHz Synthesizer Subassembly A2A6A13, Maintenance Schematic Diagram	5-157
5-35A	10 MHz/1 MHz Synthesizer Subassembly A2A6A13, Maintenance Schematic Diagram	5-158.1
5-36	10 MHz/1 MHz Filter Subassembly A2A6A14, Maintenance Schematic Diagram	5-159
5-37	Power Supply Subassembly A2A6A15, Maintenance Schematic Diagram	5-161
5-37A	Power Supply Subassembly A2A6A15, Maintenance Schematic Diagram	5-162.1
5-38	Frequency Generator Subassembly A2A6A16, Maintenance Schematic Diagram	5-163
5-38A	Frequency Generator Subassembly A2A6A16, Maintenance Schematic Diagram	5-164.1
5-39	100 kHz Synthesizer Subassembly A2A6A17, Maintenance Schematic Diagram	5-165
5-39A	100 kHz Synthesizer Subassembly A2A6A17, Maintenance Schematic Diagram	5-166.1

LIST OF ILLUSTRATIONS (CONTINUED)

Number	Title	Page
5-40	10 kHz/1 kHz/100 Hz Synthesizer Subassembly (No. 1) A2A6A18, Maintenance Schematic Diagram	5-167
5-40A	10 kHz/1 kHz/100 Hz Synthesizer Subassembly (No. 1) A2A6A18, Maintenance Schematic Diagram	5-168.1
5-41	Code Generator Assembly A2A7, Maintenance Schematic Diagram	5-169
5-42	RATT Tone Generator Assembly A2A9, Maintenance Schematic Diagram	5-171
5-43	IF Amplifier Assembly A2A12, Maintenance Schematic Diagram	5-173
5-44	Audio Processor Assemblies A2A21A18 and A2A21A19, Maintenance Schematic Diagram	5-175
5-45	Audio Control A2A21A20, Maintenance Schematic Diagram	5-179
6-1	Radio Transmitter T-827H/URT, Overall Adjustment and Alignment Bench Test Setup	6-5
6-2	Mode Selector Assembly A2A1, Adjustment and Alignment Bench Test Setup	6-16
6-3	RF Amplifier Assembly A2A4, Adjustment and Alignment Bench Test Setup	6-22
6-4	Frequency Standard Assembly A2A5, Adjustment and Alignment Bench Test Setup	6-31
6-5	Translator/Synthesizer A2A6, Adjustment and Alignment Bench Test Setup	6-38
6-6	IF Amplifier Assembly A2A12, Adjustment and Alignment Bench Test Setup	6-58
6-7	Audio Processor Assemblies A2A21A18 and A2A21A19, Adjustment and Alignment Bench Test Setup	6-61
6-8	RF Amplifier Assembly A2A4, Disassembly Parts Identification	6-83
6-9	RF Amplifier Assembly A2A4, Bottom View, Disassembly Screw Locations	6-83
6-10	RF Amplifier Assembly A2A4, RF Chassis and Turret Assembly, Disassembly Parts Location	6-84
6-11	Switch and coupling Orientation	6-92
7-1	Case Assembly A1, Component Locations	7-183
7-2	Switch Interlock Assembly A1MP7, Component Locations	7-184
7-3	Filter Box Assembly A1A1, Component Locations	7-185
7-4	Transmitter Main Frame A2, Component Locations	7-187
7-5	Triple-Sprocket Assembly A2MP8, Component Locations	7-189
7-6	Dual-Sprocket Assembly A2MP9, Component Locations	7-190
7-7	Front Panel Assembly (P/O A2), Component Locations	7-191
7-8	Mode Selector Assembly A2A1, Component Locations	7-192
7-9	Balanced Modulator, Printed Circuit Subassembly A2A1A1, Component Locations	7-193
7-10	LSB Balanced Modulator, Printed Circuit Subassembly A2A1A2, Component Locations	7-194
7-11	Isolation Amplifier, Printed Circuit Subassembly A2A1A3, Component Locations	7-195
7-12	500 kHz Gates, Printed Circuit Subassembly A2A1A4, Component Locations	7-197
7-13	RF Amplifier Assembly A2A4, Component Locations	7-199
7-14	Mounting Base Assembly (P/O A2A4), Component Locations	7-200
7-15	Top Coupling Assembly A2A4MP62 and A2A4MP63, Component Locations	7-201

LIST OF ILLUSTRATIONS (CONTINUED)

Number	Title	Page
7-16	RF Chassis Assembly (P/O A2A4), Component Locations	7-202
7-17	Turret Drive Gear Assembly (P/O A2A4) Component Locations	7-203
7-18	Tuning Rotor Assembly A2A4MP47, Component Locations	7-204
7-19	RF Amplifier Subassembly A2A4A1, Component Locations	7-205
7-20	12 MHz Subassembly A2A4A2, Component Locations	7-206
7-21	13 MHz Subassembly A2A4A3, Component Locations	7-206
7-22	14 MHz Subassembly A2A4A4, Component Locations	7-207
7-23	15 MHz Subassembly A2A4A5, Component Locations	7-207
7-24	16 MHz Subassembly A2A4A6, Component Locations	7-208
7-25	17 MHz Subassembly A2A4A7, Component Locations	7-208
7-26	18 MHz Subassembly A2A4A8, Component Locations	7-209
7-27	19 MHz Subassembly A2A4A9, Component Locations	7-209
7-28	20 MHz Subassembly A2A4A10, Component Locations	7-210
7-29	21 MHz Subassembly A2A4A11, Component Locations	7-210
7-30	22 MHz Subassembly A2A4A11, Component Locations	7-211
7-31	23 MHz Subassembly A2A4A13, Component Locations	7-211
7-32	24 MHz Subassembly A2A4A14, Component Locations	7-212
7-33	25 MHz Subassembly A2A4A15, Component Locations	7-212
7-34	26 MHz Subassembly A2A4A16, Component Locations	7-213
7-35	27 MHz Subassembly A2A4A17, Component Locations	7-213
7-36	28 MHz Subassembly A2A4A18, Component Locations	7-214
7-37	29 MHz Subassembly A2A4A19, Component Locations	7-214
7-38	2 MHz Subassembly A2A4A20, Component Locations	7-215
7-39	3 MHz Subassembly A2A4A21, Component Locations	7-215
7-40	4 MHz Subassembly A2A4A22, Component Locations	7-216
7-41	5 MHz Subassembly A2A4A23, Component Locations	7-216
7-42	6 MHz Subassembly A2A4A24, Component Locations	7-217
7-43	7 MHz Subassembly A2A4A25, Component Locations	7-217
7-44	8 MHz Subassembly A2A4A26, Component Locations	7-218
7-45	9 MHz Subassembly A2A4A27, Component Locations	7-218
7-46	10 MHz Subassembly A2A4A28, Component Locations	7-219
7-47	11 MHz Subassembly A2A4A29, Component Locations	7-219
7-48	100 kHz Rotor Subassembly A2A4A30, Component Locations	7-220
7-49	10 kHz Rotor Subassembly A2A4A31, Component Locations	7-221
7-50	10 kHz Rotor Subassembly A2A4A32, Component Locations	7-222
7-51	100 kHz Rotor Subassembly A2A4A33, Component Locations	7-223
7-52	100 kHz Rotor Subassembly A2A4A34, Component Locations	7-224
7-53	10 kHz Rotor Subassembly A2A4A35, Component Locations	7-225
7-54	10 kHz Rotor Subassembly A2A4A36, Component Locations	7-226
7-55	100 kHz Rotor Subassembly A2A4A37, Component Locations	7-227
7-56	RF Mixer Amplifier Subassembly A2A4A38, Component Locations	7-229
7-57	Frequency Standard Assembly A2A5, Component Locations	7-231
7-58	Frequency Standard Assembly A2A5, Housing Removed, Top View, Component Locations	7-231
7-59	Oscillator and Oven Control Subassembly A2A5A1, Component Locations	7-233
7-60	Divider/Amplifier Subassembly A2A5A2, Component Locations	7-235
7-61	Oven Body Subassembly A2A5A3, Component Locations	7-237
7-62	5 MHz Reference Control Subassembly A2A5A4, Component Locations	7-239

LIST OF ILLUSTRATIONS (CONTINUED)

Number	Title	Page
7-63	Translator/Synthesizer Assembly A2A6, Component Locations	7-241
7-64	Filter Assembly A2A6A7, Component Locations	7-243
7-65	RF TRanslator Subassembly A2A6A8, Component Locations	7-245
7-66	1 kHz/100 Hz Synthesizer Subassembly (No. 2) A2A6A12, Component Locations	7-247
7-66A	1 kHz/100 Hz Synthesizer Subassembly (No. 2) A2A6A12, Component Locations	7-248.1
7-67	10 MHz/1 MHz Synthesizer Subassembly A2A6A13, Component Locations	7-249
7-67A	10 MHz/1 MHz Synthesizer Subassembly A2A6A13, Component Locations	7-250.1
7-68	10 MHz/1 MHz Filter Subassembly A2A6A14, Component Locations	7-251
7-68A	10 MHz/1 MHz Filter Subassembly A2A6A14, Component Locations	7-252.1
7-69	Power Supply Subassembly A2A6A15, Component Locations	7-253
7-69A	Power Supply Subassembly A2A6A15, Component Locations	7-254.1
7-70	Frequency Generator Subassembly A2A6A16, Component Locations	7-255
7-71	100 kHz/10 kHz Synthesizer Subassembly A2A6A17, Component Locations	7-257
7-72	1 kHz/100 Hz Synthesizer Subassembly (No. 1) A2A6A18, Component Locations	7-259
7-73	Code Generator Assembly A2A7, Component Locations	7-261
7-74	Power Supply Assembly A2A8, Component Locations	7-263
7-75	RATT Tone Generator Assembly A2A9, Component Locations	7-265
7-76	RATT Tone Generator Subassembly A2A9A1, Component Locations	7-267
7-77	Meter Amplifier Assemblies A2A10 and A2A11, Component Locations ...	7-269
7-78	IF Amplifier Assembly A2A12, Component Locations	7-270
7-79	IF Amplifier Subassembly A2A12A1, Component Locations	7-271
7-80	Handset Filter Assembly A2A14, Component Locations	7-273
7-81	IF Filter Assembly A2A15, Component Locations	7-273
7-82	Audio Interconnect Board A2A21, Component Locations	7-724
7-83	Audio Processor Assemblies A2A21A18 and A2A21A19,, Component Locations	7-275
7-84	Audio Control Subassembly A2A21A20	7-277
7-85	Mating Connector Kit A3	7-279
7-86	Extender Cable Kit A7	7-280
8-1	Radio Transmitter T-827H/URT, Block Diagram	8-8
8-2	Radio Transmitter T-827H/URT, Outline and Mounting Dimensions (2 Sheets)	8-9
8-3	Radio Transmitter T-827H/URT, Summary List of Installation Materials	8-13
8-4	Radio Transmitter T-827H/URT, Cable Running Sheets	8-15

LIST OF TABLES

Number	Title	Page
1-1	Radio Transmitter T-827H/URT, Assemblies and Reference Designations	1-5
1-2	Radio Transmitter T-827H/URT, Functional Characteristics	1-8
1-3	Radio Transmitter T-827H/URT, Crystal Complement	1-9
1-4	Equipment, Accessories and Documents Supplied	1-10
1-5	Equipment and Publications Required but Not Supplied	1-11
1-6	Nonstandard Abbreviations	1-18
1-7	Radio Transmitter T-827H/URT, Factory Changes	1-19
1-8	Radio Transmitter T-827H/URT, Field Changes	1-25
2-1	Operating Controls, Indicators, and Connectors	2-5
2-2	Operating Procedures	2-10
2-3	Normal and Emergency Shutdown Procedures	2-14
2-4	Operating Procedures for Interference Conditions	2-14
2-5	Maintenance Controls and Connectors	2-15
2-6	Operator's Maintenance Procedures	2-17
3-1	Comprehensive Frequency Translation Chart	3-15
3-2	Tuning Code Chart	3-28
4-1	Scheduled Maintenance Action Index	4-2
4-2	Preventive Maintenance Procedures	4-3
4-3	Radio Transmitter T-827H/URT Performance Test Preliminary Procedures	4-6
4-4	Overall Radio Transmitter Operation Check	4-9
4-5	Power Supply Assembly A2A8, Check	4-11
4-6	Frequency Standard Assembly A2A5, Oscillator, Output and Automatic Switching Check	4-13
4-7	Audio Processor A2A21A18 Check	4-15
4-8	Audio Processor A2A21A19 Check	4-17
4-9	RATT Tone Generator Assembly A2A9 Output Frequencies and Level Check	4-19
4-10	IF Amplifier Assembly A2A12, IF Output, APC and PPC Check	4-20
4-11	Translator/Synthesizer Assembly A2A6 Frequency Check	4-21
4-12	RF Amplifier Assembly A2A4 Output Check	4-22
4-13	Hum Modulation Level Check	4-23
4-14	Spurious Output Levels Check	4-25
4-15	Intermodulation Product Levels Check, Normal Mode	4-27
4-16	Mode Selector Assembly A2A1 Carrier and Opposite Sideband Levels Check	4-29
5-1	Troubleshooting Index	5-3
5-2	Relay Index	5-6
5-3	Indicator Lamp Index	5-6
5-4	Protective Devices Index	5-C
5-5	Maintenance Turn-On Procedure	5-7
6-1	Radio Transmitter T-827H/URT, Overall Adjustment and Alignment Procedures	6-3
6-2	Mode Selector Assembly A2A1, Adjustment and Alignment Procedures	6-15
6-3	RF Amplifier Assembly A2A4, Adjustment and Alignment Procedures	6-21
6-4	Frequency Standard A2A5, Adjustment and Alignment Procedures	6-30

LIST OF TABLES (CONTINUED)

Number	Title	Page
6-5	Translator/Synthesizer Assembly A2A6, Adjustment and Alignment Procedures	6-37
6-6	IF Amplifier Assembly A2A12, Adjustment and Alignment Procedures	6-57
6-7	Audio Processors A2A21A18 and A2A21A19, Adjustment and Alignment Procedures	6-60
6-8	Inspection Requirements for Radio Transmitter T-827H/URT	6-73
7-1	Radio Transmitter T-827H/URT, List of Major Assemblies	7-2
7-2	Radio Transmitter T-827H/URT, Parts List	7-4
■ 7-2A	Radio Transmitter T-827H/URT, Parts List	7-138.1
7-3	List of Common Item Descriptions	7-165
■ 7-3A	List of Common Item Descriptions	7-165.1
7-4	List of Attaching Hardware	7-168
■ 7-4A	List of Attaching Hardware	7-171.1
7-5	List of Manufacturers	7-177
8-1	Radio Transmitter T-827H/URT Installation Standards Summary Sheet	8-6