

**BELL SYSTEM PRACTICES**  
**Teletypewriter and Data Stations**

**SECTION P34.314**  
**Issue 2, December, 1961**  
**AT&TCo Standard**





 
# **28G AND 28H TELETYPEWRITER CABINETS WIRING DIAGRAM**

## **1. GENERAL**

1.01 This section shows the wiring of the 28G teletypewriter cabinet for use with the 28F or 28G electrical service unit, and the 28H teletypewriter cabinet for use with 28L electrical service unit. Both cabinets are used for 28 Automatic Send-Receive Set.








1.02 This section is reissued to identify the 28G and 28H cabinets as teletypewriter cabinets.

(c)  
CABINET TERMINAL BLOCKS

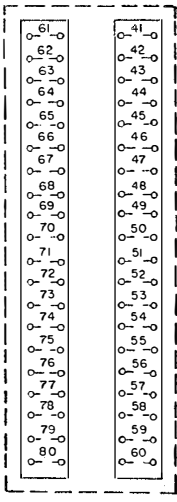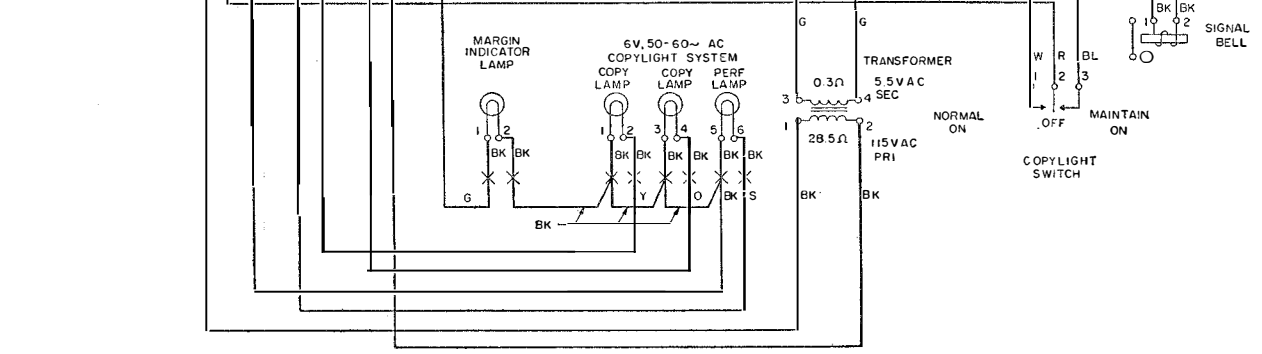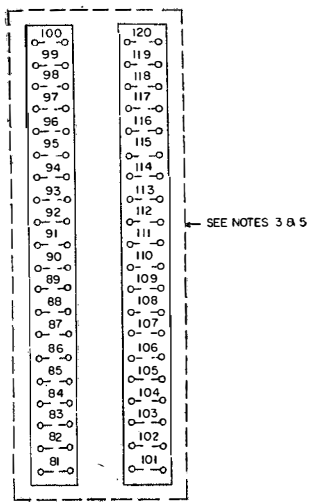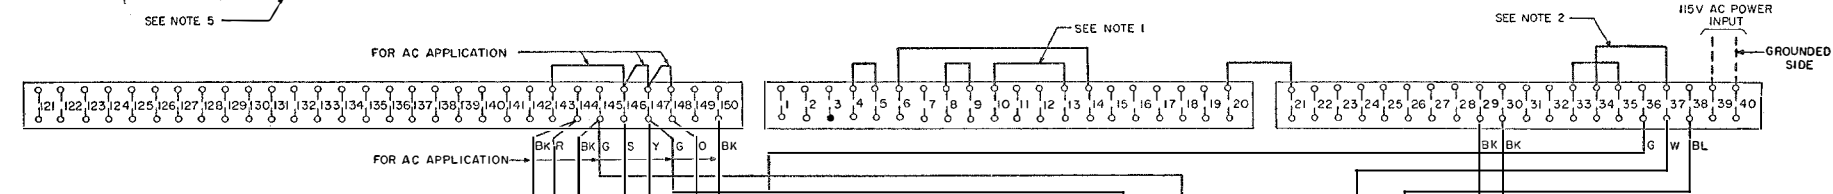

- NOTES:
1. IF KEYBOARD SHUNTING IS NOT DESIRED OR WHEN SIGNAL LINE BREAK SWITCH IS PRESENT, REMOVE THE BLACK STRAP CONNECTED BETWEEN TERMINALS C10 AND C13 AND CONNECT TERMINALS C9 AND C13.
  2. FOR DIRECT CONTROL OF THE LINE SHUNT RELAY FROM THE POWER SWITCH, REMOVE STRAP BETWEEN TERMINALS C-34 AND C-37 AND CONNECT TERMINALS C-34 AND C-35.
  3. SUPPLIED WITH CERTAIN TRANSMITTER DISTRIBUTOR HOUSINGS WHEN REQUIRED.
  4. FOR USE WITH SELECTIVE CALLING.
  5. SUPPLIED IF REQUIRED BY CUSTOMER.

     (C)  
CABINET TERMINAL BLOCKS

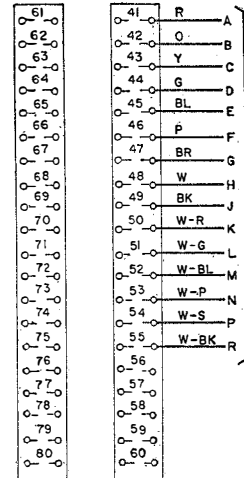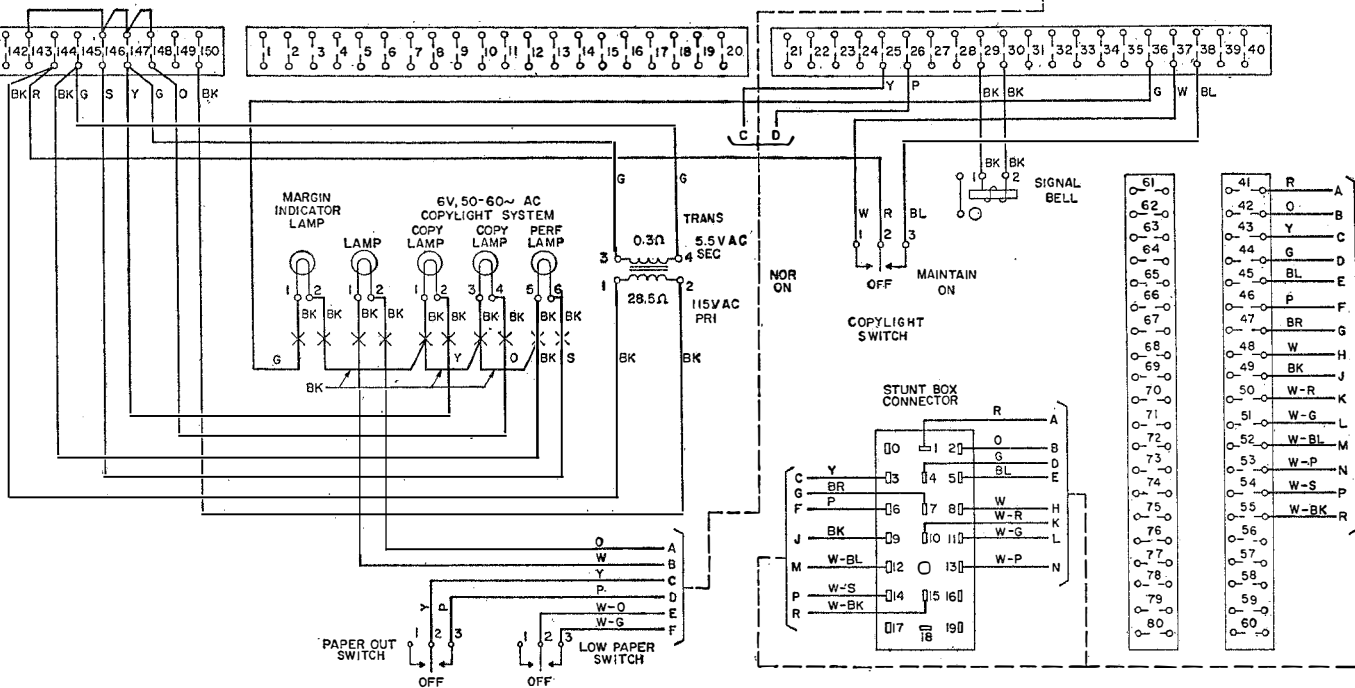

28H Teletypewriter Cabinet