

INDEX

SUBJECT	PARAGRAPH (Figure) *Table
A	
Adjustments	5-6
Alignment Procedure	5-5
Antenna Coupler CU-714/SRA-22	7-3d(2)
Coupler Control C-2698/SRA-22	7-3d(1)
Antenna Coupler Group AN/SRA-22	1-1, 5-4a
Block Diagram	(4-1)
Diode Complement	*1-3
Efficiency with Various Antenna Lengths	*2-2
Equipment Supplied	*1-2
Front Panel Control Location	(2-2)
Introduction	1-1
List of Manufacturers	*6-2
Relationship of Units	(1-2)
Shipping Data	*1-4
Test Setup, Block Diagram	(7-8)
Antenna Coupler CU-714/SRA-22	1-2b, 4-2b, 7-3d(2)
Alignment Procedures	7-3d(2)
Exploded View	(6-1)
Grounding Recommendations	(7-6)
Outline and Mounting Dimensions	(7-1)
Sealing Procedures	(7-7)
Schematic Diagram	(5-8)
Weatherproofing Procedures	(7-5)
Antenna Switch 2S1	5-4d(3)
Antenna Transfer Relay 2K3	5-4d(3)
B	
Backlash Checks	7-3e(1)
Blower	4-2b(3)
C	
Cable Assembly	7-1b(4)
Cable Requirements	*7-1
Capabilities and Limitations	2-2
Capacitor Drive	4-2b(1)
Circuit	4-2b(1)
Simplified Schematic Diagram	(4-6)
Switch 1S10	7-3c(2)
Switch 1S10 Alignment	(5-2)
Switch 1S10 Wire Connections	*5-4
Capacitor Drive Switch 1S10	7-3c(2)
Replacement	5-6b(4)(e)
Capacitor Limit Switch 1S11	7-3c(7)
Replacement	5-6b(4)(d)
Wire Connections	*5-3
Capacitor Series-Shunt Switch 1S9	4-2a(5), 5-4d(3),
Replacement	7-3c(7)
Replacement	5-6b(4)(e)
Ceramic Drum	7-3c(8)
Cleaning	7-2c
Bronze Oilite Bearings	7-2c(26)

SUBJECT	PARAGRAPH (Figure) *Table
C (Continued)	
Castings	7-2c(3)
Ceramic Coil Forms	7-2c(28)
Ceramic Drum	7-2c(22)
Connectors	7-2c(5)
Covered Cable	7-2c(2)
Covers and Shields	7-2c(6)
Dials and Knobs	7-2c(7)
Fuse Holder and Fuses	7-2c(19)
Gaskets and Shim Washers (Paper or Fiber)	7-2c(9)
Insulators	7-2c(10)
Jacks	7-2c(11)
Lamp-Holder Lens	7-2c(14)
Lamps Holders	7-2c(12)
Lamps	7-2c(13)
Machined Metal Parts	7-2c(15)
Materials and Protective Agents	*7-2
Mechanical Metal Parts	7-2c(16)
Metal, Fiber or Fabric Gears	7-2c(24)
Molded Plastic Parts	7-2c(29)
Motors and Relays	7-2c(21)
Neoprene or Rubber Gaskets and Seals	7-2c(8)
Nonsealed Ball Bearings	7-2c(1)
Nonsealed Needle Bearings	7-2c(25)
Receptacles	7-2c(17)
Rotary Switches	7-2c(18)
Sealed or Shielded Bearings	7-2c(27)
Silver Ribbon	7-2c(23)
Toggle Switches	7-2c(20)
Wired Chassis	7-2c(4)
Clearances	7-3e(2)
Coil 1L1	5-4d(3)
Coil Coarse Tune-Fine Tune	4-2a(2)
Coil Limit Switch 1S12 Replacement	5-6b(4)(a)
Coil Potentiometer 1R6 and H-V Contact (265)	7-3c(6)
Adjustment 1R6	5-5b(5)
Replacement 1R6	5-6b(4)(a)
Coil Stop Adjustment	5-5b(2)
Coil Stop Assembly	7-3c(3)
Coil Stop Cam Positioning	(5-1)
Coil-Tap Tuning Circuit, Simplified	
Schematic Diagram	(4-3)
Contact H-V (265) and Coil Potentiometer 1R6	7-3c(6)
Controls	2-3a
Description	2-3a
Settings	5-3b
Settings Prior to Starting	2-3b(1)
Control Settings	5-3b
Prior to Starting	2-3b(1)
Controls/Indicators and Functions	*2-1
Coupler Control C-2698/SRA-22	1-2a, 4-2a, 7-3d(1)
Alignment	7-3d(1)
Directional Coupler	(5-5)
Front Panel Removed	(5-3)
Functional Sections	4-1
Outline and Mounting Dimensions	(7-2)

SUBJECT	PARAGRAPH (Figure) *Table
C (Continued)	
Rear Panel Removed	(5-4)
Schematic Diagram	(5-7)
VSWR Protector	(5-6)
D	
Description of Controls	2-3a
Dial Set to 100	(2-3)
Diode Complement	1-6c
Directional Coupler	4-2a(6)
Sub-Assembly 2A1	5-4d(1)
2A1 Simplified Schematic Diagram	(4-4)
Disassembly Antenna Coupler CU-714/SRA-22	7-2b
Disassembly Coupler Control C-2698/SRA-22	5-6a, 7-2a
E	
Electrical Limit Switches	4-2a(3)
Emergency Maintenance	2-4b
End Play and Clearances	7-3e(2)
Equipment and Publications	
Required But Not Supplied	1-6b
Equipment List	1-6
Equipment Supplied	1-6a
F	
Factory or Field Changes	1-3
Field Change Information	1-3, *1-1
Final Check	5-5c
Final Reassembly and Test	7-4
Final Reassembly	7-4a
Final Test	7-4b
Front Casting	7-3c(10)
Front Plate	7-3c(9)
Functional Description	1-2, 2-1
Antenna Coupler CU-714/SRA-22	1-2b
Control Coupler C-2698/SRA-22	1-2a
Functional Sections	4-2
Troubleshooting	5-4
G	
Gear Assemblies CU-714/SRA-22	7-3c(1)
Gear Data	*7-3
Gear Removal and Replacement	5-6b(3)
H	
H-V Contact (265)	7-3c(6)
H-V Outlet Plate	7-3c(5)
I	
Impedance Characteristics of Typical 35-Foot	
Whip Antenna	(2-1)
Indicating Circuits	5-4b

SUBJECT	PARAGRAPH (Figure) *Table
I (Continued)	
Indicators Tap and Coil	4-2a(1)
Inspection	7-2d
Aluminum Drum	7-2d(34)
Bearings	7-2d(1)
Castings	7-2d(2)
Ceramic Drum	7-2d(13)
Coils	7-2d(11)
Connectors	7-2d(12)
Covered Cable	7-2d(10)
Covers and Shields	7-2d(3)
Dials and Knobs	7-2d(4)
Fiber Gaskets	7-2d(6)
Fixed Capacitors	7-2d(31), *7-4
Fixed Composition Resistors	7-2d(20)
Fixed Film and Wire-Wound Resistors	7-2d(21)
Gaskets and Seals	7-2d(5)
Gears	7-2d(7)
Insulators	7-2d(29)
Jacks	7-2d(14)
Lamp Holders	7-2d(16)
Lamps	7-2d(15)
Lenses	7-2d(17)
Machined Metal Parts	7-2d(8)
Metal Parts	7-2d(9)
Molded Plastic Parts	7-2d(18)
Motors and Relays	7-2d(28)
Receptacles	7-2d(19)
Rotary Switches	7-2d(24)
Silver Coil Ribbon	7-2d(30)
Terminal Connections	7-2d(23)
Toggle Switches	7-2d(25)
Transformers	7-2d(26)
Variable Capacitors	7-2d(32)
Variable Resistors	7-2d(22)
Variable Vacuum Capacitor	7-2d(33)
Wiring	7-2d(27)
Inspection and Adjustments	7-1c
Installation	7-1
Cable Assembly	7-1b(4)
Inspection and Adjustments	7-1c
Interconnecting Diagrams	7-1b(3)
Outline Drawing	7-1b(2)
Pointers	7-1b(1)
Preparation for Reshipment	7-1d
Requirements	7-1b
Unpacking and Handling	7-1a
Weatherproofing	7-1b(5)
Interconnecting Diagrams	
Antenna Coupler Group AN/SRA-22 for Use as a Separate Unit	(7-4)
Antenna Coupler Group AN/SRA-22 with Radio Set AN/URC-32	(7-3)
Interconnection Terminal Board TB-5	(1-3)
Introduction	1-1, 3-1, 6-1
General Information	1-1
Parts List	6-1
Scheduled Tests and Servicing	3-1

SUBJECT	PARAGRAPH (Figure) *Table
L	
List of Manufacturers	6-3
LOAD-ANT Switch	4-2a(7)
M	
Maintenance	3-3
Parts List	*6-1, 6-2
Requirement Description	3-3
Requirement Index	*3-1, 3-2
Major Overhaul	7-2
Motor Control Circuits	5-4c
Motors and Gears Removal and Replacement	5-6b(3)
O	
Operating Check	7-3e(3)
Operating Procedures	2-3
Antennas Less Than 35 Feet in Length	2-3c
Description of Controls	2-3a
Precautions	2-3f
Sequence of Operation	2-3b
Stopping the Equipment	2-3d
Summary	2-3g
Tuning Chart	2-3e
Operation	2-1
Capabilities and Limitations	2-2
Functional Description	2-1
Operator's Maintenance	2-4
Emergency Maintenance	2-4b
Operator's Check	2-4a
Outline Drawing Installation Requirements	7-1b(2)
Over-All Functional Description	4-1
Over-All Troubleshooting	5-3
Control Setting	5-3b
Preliminary Check	5-3a
Typical Malfunctions	5-3c
P	
Plug 1P9	7-3c(7)
Precautions During Operation	2-3f
Preliminary Check in Over-All Troubleshooting	5-3a
Preliminary Steps to Checkout and Alignment Procedure	5-5b(1)
Preparation for Reshipment	7-1d
Procedures for Checkout and Alignment	5-5b
R	
Reassembly and Testing	7-3
Antenna Coupler CU-714/SRA-22	7-3c
Case and Blower Assembly	7-3a
Coupler Control C-2698/SRA-22	7-3b
Parts and Subassemblies	5-6
Reassembling Antenna Coupler CU-714/SRA-22	7-3c
Reassembling Case and Blower Assembly	7-3a

SUBJECT	PARAGRAPH (Figure) *Table
R (Continued)	
Reassembling Coupler Control C-2698/SRA-22	7-3b
Reassembly of Parts and Subassemblies	5-6
Reference Data	1-4
Relationship of SWR to Incident and Reflected Power	(3-1)
Removal, Adjustment, Repair, and Reassembly of Parts and Subassemblies	5-6
Removal and Disassembly of Antenna Coupler CU-714/SRA-22	7-2b
Removal and Disassembly Coupler Control C-2698/SRA-22	5-6a, 7-2a
Removal and Replacement Antenna Coupler CU-714/SRA-22 Components	5-6b
Removal and Replacement Motors and Gears	5-6b(3)
Removal and Replacement Tap Assembly and Coil Assembly	5-6b(2)
Removal Antenna Coupler Unit from Case	5-6b(1)
Repair of Parts and Subassemblies	5-6
Replacement Antenna Coupler CU-714/SRA-22 Components	5-6b
Replacement Capacitor Limit Switch 1S11	5-6b(4)(d)
Replacement Capacitor Series-Shunt Switch 1S9 and Capacitor Drive Switch 1S10	5-6d(4)(e)
Replacement of Coil Indicator Potentiometers 1R6 and Coil Limit Switch 1S12	5-6b(4)(a)
Replacement Items Not Requiring the Separation of Gear Plates	5-6b(4)
Replacement Motors and Gears	5-6b(3)
Replacement Tap Assembly and Coil Assembly	5-6b(2)
Replacement Tap Indicator Limit Switches 1S13 and 1S14 Potentiometer 1R7 and Tap	5-6b(4)(b) 5-6b(4)(b) 5-6b(4)(b)
Replacement Variable Vacuum Capacitor 1C7	5-6b(4)(c)
R-F Power Meter 2M3	5-4d(1)
R-F Power Section	5-4d
Routine Check Chart	*2-3
S	
Safety Precautions	1-5
Sequence of Operation	2-3b
Series-Shunt Switch 1S9	5-4d(3), 7-3c(7)
Replacement	5-6b(4)(e)
Shipping Data	1-6d
Special Test Assemblies	*5-2
Special Tools	5-2, 7-4b(1)
Stopping the Equipment	2-3d
Summary Abbreviated Procedure for Tuning AN/SRA-22	2-3g
Symptoms of Probable Fuse Failures	*2-4

SUBJECT	PARAGRAPH (Figure) *Table
T	
Tap and Coil Indicators	4-2a(1)
Meter Circuits Simplified	
Schematic Diagram	(4-2)
Replacement of Potentiometer 1R7	5-6b(4)(b)
Tap Assembly and Coil Assembly	
Removal and Replacement	5-6b(2)
Tap Coarse Tune-Fine Tune.	4-2a(4)
Tap Electrical Limit Switch.	5-5b(4)
Adjustment	5-5b(4)
Replacement of 1S13 and 1S14.	5-6b(4)(b)
Tap Potentiometer 1R7	7-3c(4)
Adjustment	5-5b(6)
Tap Stop Adjustment	5-5b(3)
Test Equipment and Special Tools	5-2, 7-4b(1)
Test Equipment Required.	*5-1
Testing	7-3e
Test Procedure	7-4b(3)
Test Setup	7-4b(2)
Transfer Relay and LOAD-ANT Switch.	4-2a(7)
Troubleshooting and Repair	5-1
Functional Sections.	5-4
General Information	5-1
TUNE-OPERATE Switch	4-2a(8)
Tuning and Loading	4-2b(2)
Tuning Chart	2-3e
Tuning Procedure Where a Dummy	
Load is Available	2-3b(2)
Twelve-Position Capacitor Switch 2S2 and	
Capacitor Series-Shunt Switch 1S9.	4-2a(5)
Typical Malfunctions.	5-3c
Typical Tuning Chart	(2-4)
U	
Unpacking and Handling	7-1a
V	
Variable Vacuum Capacitor 1C7 Alignment	5-5b(7)
Replacement	5-6b(4)(c)
VSWR During Operation	2-3b(3)
Protective Device.	2-3b(3)
Protective Subassembly 2A2.	5-4d(2)
Protector	4-2a(9)
Protector 2A2 Simplified	
Schematic DS3 Diagram.	(4-5)
Relationship to Incident and	
Reflected Power.	(3-1)
W	
Weatherproofing	7-1b(5)