

From Preliminary Manual

LIST OF ILLUSTRATIONS (CONTINUED)

| Figure | Title | Page |
|--------|---|-------|
| 5-17. | RATT Tone Generation, Fault Logic Diagram | 5-79 |
| 5-18. | Carrier Reinsertion, Fault Logic Diagram | 5-81 |
| 5-19. | IF Amplification and Level Control Fault Logic Diagram . . | 5-83 |
| 5-20. | IF-to-RF Conversion, Fault Logic Diagram | 5-85 |
| 5-21. | RF Amplification and Level Control, Fault Logic Diagram . | 5-87 |
| 5-22. | Frequency Standard A2A5, Fault Logic Diagram | 5-89 |
| 5-23. | Frequency Generator A2A6A16, Fault Logic Diagram | 5-91 |
| 5-24. | 10 kHz/1 kHz/100 Hz Synthesizer A2A6A18 and A2A6A12, Fault Logic Diagram | 5-93 |
| 5-25. | 100 kHz Synthesizer, Fault Logic Diagram | 5-95 |
| 5-26. | 10 MHz/1 MHz Synthesizer, Fault Logic Diagram | 5-97 |
| 5-27. | CW, RATT, DATA and PTT Keying, Fault Logic Diagram . | 5-99 |
| 5-28. | Transmitter Case A1 and Main Frame A2, Maintenance Schematic Diagram (3 Sheets) | 5-115 |
| 5-29. | Mode Selector Assembly A2A1, Maintenance Schematic Diagram | 5-125 |
| 5-30. | RF Amplifier Assembly A2A4, Maintenance Schematic Diagram (2 Sheets) | 5-131 |
| 5-31. | Frequency Standard Assembly A2A5, Maintenance Schematic Diagram | 5-137 |
| 5-32. | Translator/Synthesizer Assembly A2A6, Maintenance Schematic Diagram | 5-145 |
| 5-33. | RF Translator Subassembly A2A6A8, Maintenance Schematic Diagram | 5-149 |
| 5-34. | 10 kHz/1 kHz/100 Hz Synthesizer Subassembly (No. 2) A2A6A12, Maintenance Schematic Diagram | 5-151 |
| 5-35. | 10 MHz/1 MHz Synthesizer Subassembly A2A6A13, Maintenance Schematic Diagram | 5-155 |
| 5-36. | 10 MHz/1 MHz Filter Subassembly A2A6A14, Maintenance Schematic Diagram | 5-157 |
| 5-37. | Power Supply Subassembly A2A6A15, Maintenance Schematic Diagram | 5-159 |
| 5-38. | Frequency Generator Subassembly A2A6A16, Maintenance Schematic Diagram | 5-161 |
| 5-39. | 100 kHz Synthesizer Subassembly A2A6A17, Maintenance Schematic Diagram | 5-163 |
| 5-40. | 10 kHz/1 kHz/100 Hz Synthesizer Subassembly (No. 1) A2A6A18, Maintenance Schematic Diagram | 5-165 |
| 5-41. | Code Generator Assembly A2A7, Maintenance Schematic Diagram | 5-167 |
| 5-42. | RATT Tone Generator Assembly A2A9, Maintenance Schematic Diagram | 5-169 |
| 5-43. | IF Amplifier Assembly A2A12, Maintenance Schematic Diagram | 5-171 |
| 5-44. | Audio Processor Assemblies A2A21A18 and A2A21A19, Maintenance Schematic Diagram | 5-173 |
| 5-45. | Audio Control A2A21A20, Maintenance Schematic Diagram . | 5-177 |

From Preliminary Manual

LIST OF ILLUSTRATIONS (CONTINUED)

| Figure | Title | Page |
|--------|--|-------|
| 6-1. | Radio Transmitter T-827H/URT, Overall Adjustment and Alignment Bench Test Setup | 6-5 |
| 6-2. | Mode Selector Assembly A2A1, Adjustment and Alignment Bench Test Setup | 6-33 |
| 6-3. | Audio Processor Assemblies A2A18 and A2A19, Adjustment and Alignment Bench Test Setup | 6-40 |
| 6-4. | RF Amplifier Assembly A2A4, Disassembly Parts Identification | 6-47 |
| 6-5. | RF Amplifier Assembly A2A4, Bottom View, Disassembly Screw Locations | 6-47 |
| 6-6. | RF Amplifier Assembly A2A4, RF Chassis and Turret Assembly, Disassembly Parts Location | 6-48 |
| 6-7. | RF Amplifier Assembly A2A4, Adjustment and Alignment Bench Test Setup | 6-57 |
| 6-8. | Frequency Standard Assembly A2A5, Alignment and Adjustment Bench Test Setup | 6-70 |
| 6-9. | Switch and Coupling Orientation | 6-79 |
| 6-10. | Translator/Synthesizer Assembly A2A6, Adjustment and Alignment Bench Test Setup | 6-81 |
| 6-11. | IF Amplifier Assembly A2A12, Adjustment and Alignment Bench Test Setup | 6-108 |
| 7-1. | Case Assembly A1, Component Locations | 7-163 |
| 7-2. | Switch Interlock Assembly A1MP7, Component Locations | 7-164 |
| 7-3. | Filter Box Assembly A1A1, Component Locations | 7-165 |
| 7-4. | Transmitter Main Frame A2, Component Locations | 7-167 |
| 7-5. | Triple-Sprocket Assembly (P/O A2), Component Locations | 7-169 |
| 7-6. | Dual-Sprocket Assembly A2MP9, Component Locations | 7-170 |
| 7-7. | Front Panel Assembly (P/O A2), Component Locations | 7-171 |
| 7-8. | Mode Selector Assembly A2A1, Component Locations | 7-172 |
| 7-9. | Balanced Modulator, Printed Circuit Subassembly A2A1A1, Component Locations | 7-173 |
| 7-10. | Balanced Modulator, Printed Circuit Assembly A2A1A2, Component Locations | 7-174 |
| 7-11. | Isolation Amplifier, Printed Circuit Subassembly A2A1A3, Component Locations | 7-175 |
| 7-12. | 500 kHz Gates, Printed Circuit Subassembly A2A1A4, Component Locations | 7-177 |
| 7-13. | RF Amplifier Assembly A2A4, Component Locations | 7-179 |
| 7-14. | Mounting Base Assembly (P/O A2A4), Component Locations | 7-180 |
| 7-15. | Top Coupling Assembly A2A4MP62 and A2A4MP63, Component Locations | 7-181 |
| 7-16. | RF Chassis Assembly (P/O A2A4), Component Locations | 7-182 |
| 7-17. | Turret Drive Gear Assembly (P/O A2A4), Component Locations | 7-183 |
| 7-18. | Tuning Rotor Assembly A2A4MP47, Component Locations | 7-184 |
| 7-19. | RF Amplifier Subassembly A2A4A1, Component Locations | 7-185 |

From Preliminary Manual

LIST OF ILLUSTRATIONS (CONTINUED)

| Figure | Title | Page |
|--------|--|-------|
| 7-20. | 12 MHz Subassembly A2A4A2, Component Locations . . . | 7-186 |
| 7-21. | 13 MHz Subassembly A2A4A3, Component Locations . . . | 7-186 |
| 7-22. | 14 MHz Subassembly A2A4A4, Component Locations . . . | 7-187 |
| 7-23. | 15 MHz Subassembly A2A4A5, Component Locations . . . | 7-187 |
| 7-24. | 16 MHz Subassembly A2A4A6, Component Locations . . . | 7-188 |
| 7-25. | 17 MHz Subassembly A2A4A7, Component Locations . . . | 7-188 |
| 7-26. | 18 MHz Subassembly A2A4A8, Component Locations . . . | 7-189 |
| 7-27. | 19 MHz Subassembly A2A4A9, Component Locations . . . | 7-189 |
| 7-28. | 20 MHz Subassembly A2A4A10, Component Locations . . . | 7-190 |
| 7-29. | 21 MHz Subassembly A2A4A11, Component Locations . . . | 7-190 |
| 7-30. | 22 MHz Subassembly A2A4A12, Component Locations . . . | 7-191 |
| 7-31. | 23 MHz Subassembly A2A4A13, Component Locations . . . | 7-191 |
| 7-32. | 24 MHz Subassembly A2A4A14, Component Locations . . . | 7-192 |
| 7-33. | 25 MHz Subassembly A2A4A15, Component Locations . . . | 7-192 |
| 7-34. | 26 MHz Subassembly A2A4A16, Component Locations . . . | 7-193 |
| 7-35. | 27 MHz Subassembly A2A4A17, Component Locations . . . | 7-193 |
| 7-36. | 28 MHz Subassembly A2A4A18, Component Locations . . . | 7-194 |
| 7-37. | 29 MHz Subassembly A2A4A19, Component Locations . . . | 7-194 |
| 7-38. | 2 MHz Subassembly A2A4A20, Component Locations . . . | 7-195 |
| 7-39. | 3 MHz Subassembly A2A4A21, Component Locations . . . | 7-195 |
| 7-40. | 4 MHz Subassembly A2A4A22, Component Locations . . . | 7-196 |
| 7-41. | 5 MHz Subassembly A2A4A23, Component Locations . . . | 7-196 |
| 7-42. | 6 MHz Subassembly A2A4A24, Component Locations . . . | 7-197 |
| 7-43. | 7 MHz Subassembly A2A4A25, Component Locations . . . | 7-197 |
| 7-44. | 8 MHz Subassembly A2A4A26, Component Locations . . . | 7-198 |
| 7-45. | 9 MHz Subassembly A2A4A27, Component Locations . . . | 7-198 |
| 7-46. | 10 MHz Subassembly A2A4A28, Component Locations . . . | 7-199 |
| 7-47. | 11 MHz Subassembly A2A4A29, Component Locations . . . | 7-199 |
| 7-48. | 100 kHz Rotor Subassembly A2A4A30, Component Locations | 7-200 |
| 7-49. | 10 kHz Rotor Subassembly A2A4A31, Component Locations | 7-201 |
| 7-50. | 10 kHz Rotor Subassembly A2A4A32, Component Locations | 7-202 |
| 7-51. | 100 kHz Rotor Subassembly A2A4A33, Component Locations | 7-203 |
| 7-52. | 100 kHz Rotor Subassembly A2A4A34, Component Locations | 7-204 |
| 7-53. | 100 kHz Rotor Subassembly A2A4A35, Component Locations | 7-205 |
| 7-54. | 10 kHz Rotor Subassembly A2A4A36, Component Locations | 7-206 |
| 7-55. | 100 kHz Rotor Subassembly A2A4A37, Component Locations | 7-207 |
| 7-56. | RF Mixer Amplifier Subassembly A2A4A38, Component Locations | 7-209 |
| 7-57. | Frequency Standard Assembly A2A5, Component Locations | 7-211 |