

28 TELETYPEWRITER BASE  
(KEYBOARD SEND-RECEIVE AND RECEIVE ONLY)  
WIRING DIAGRAM

1. GENERAL

1.01 This section shows the wiring of the 28 Keyboard Send-Receive and Receive Only teletypewriter bases.

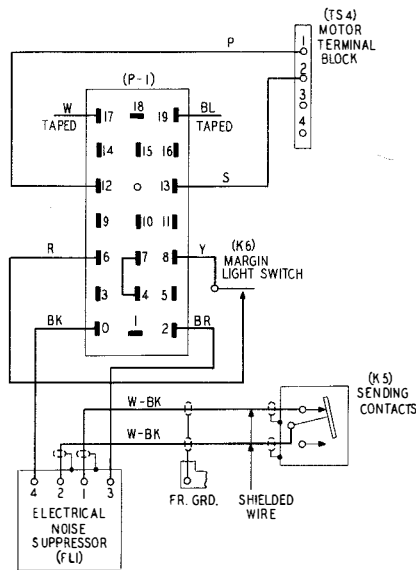


Figure 1 - 28A Teletypewriter Base

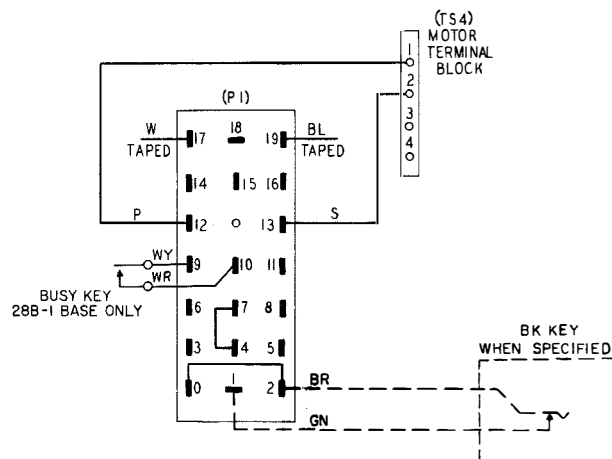


Figure 2 - 28B and 28B-1 Teletypewriter Base

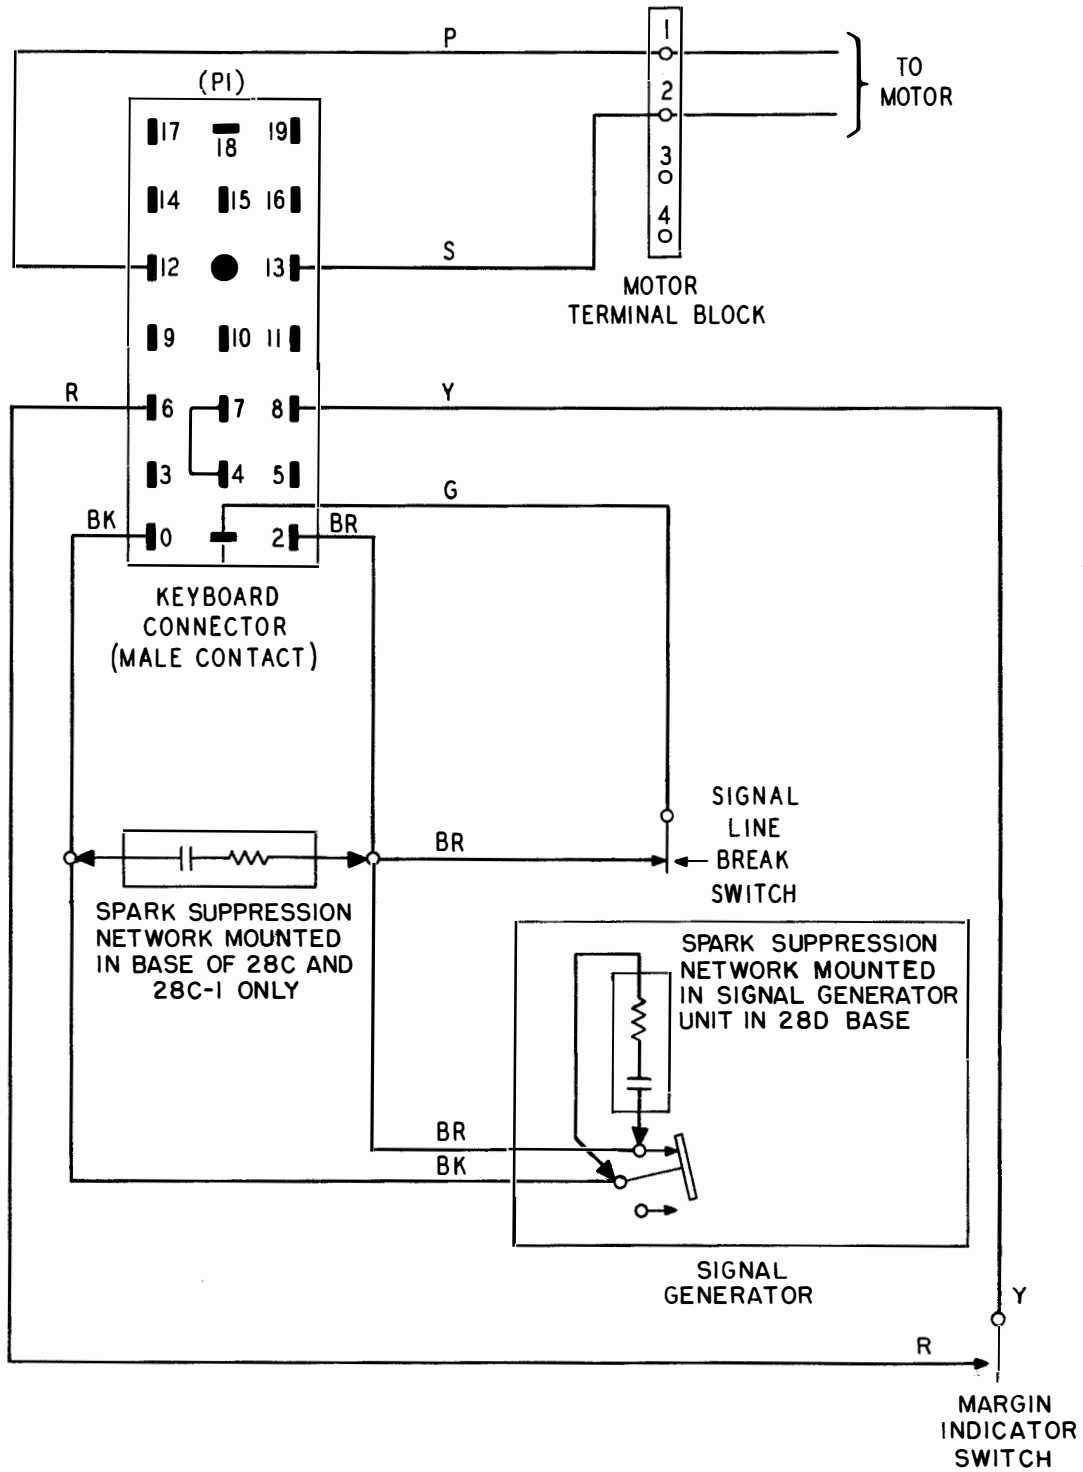


Figure 3 - 28C, 28C-1, 28D Teletypewriter Bases

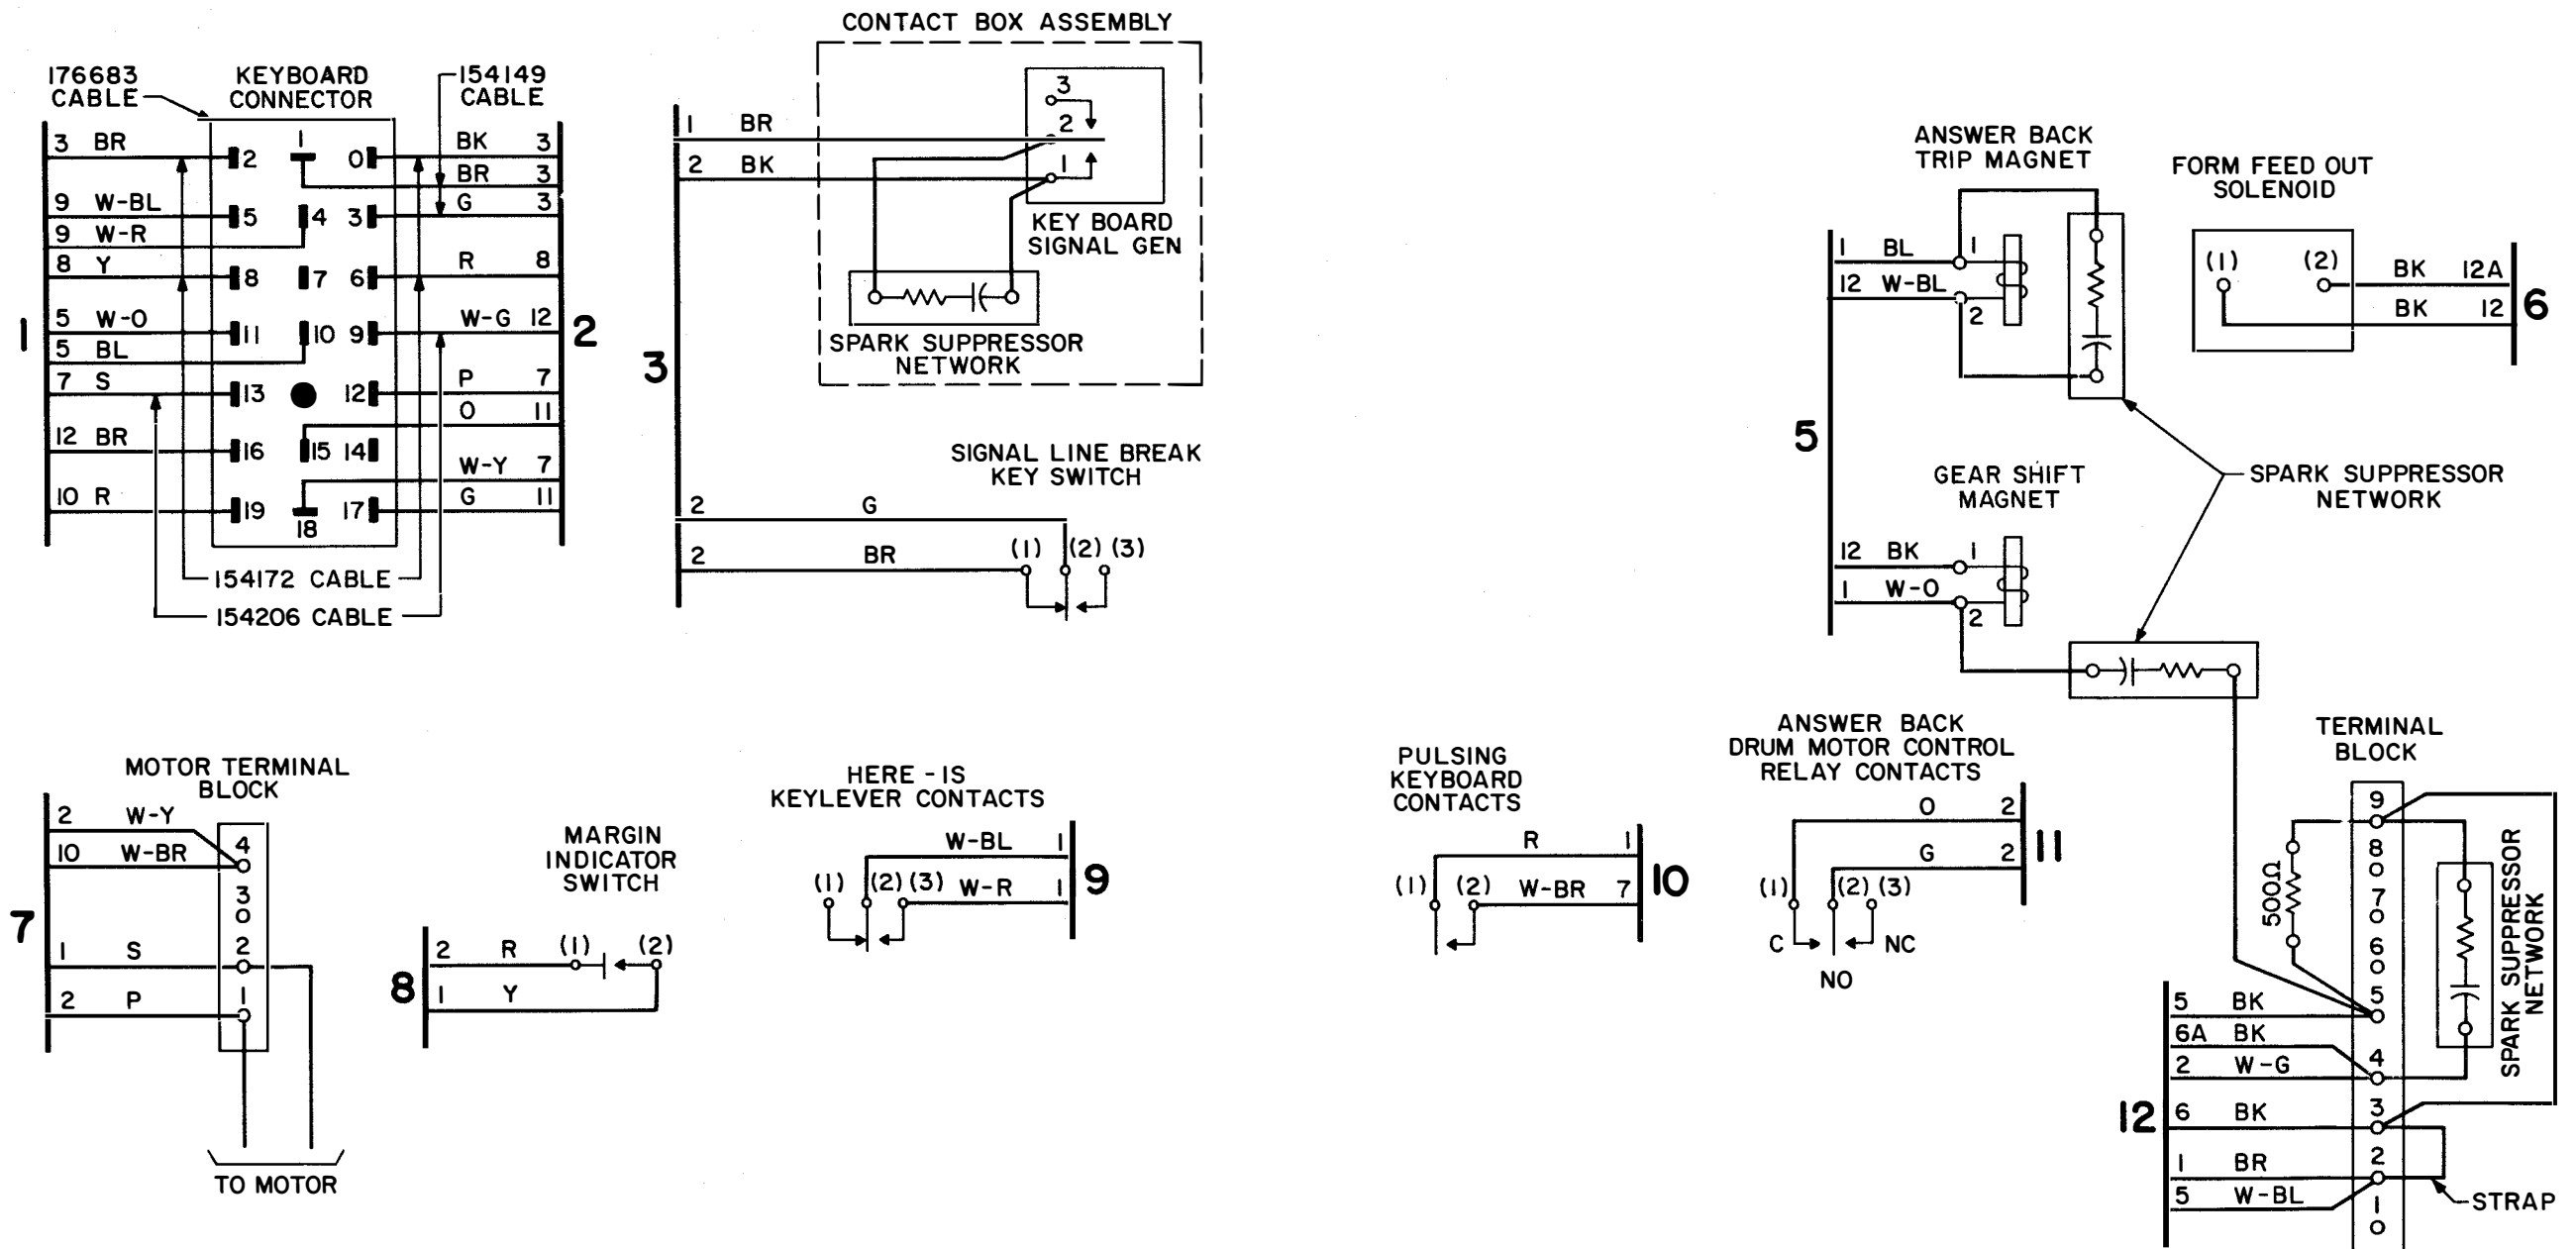


Figure 4 - 28G Teletypewriter Base

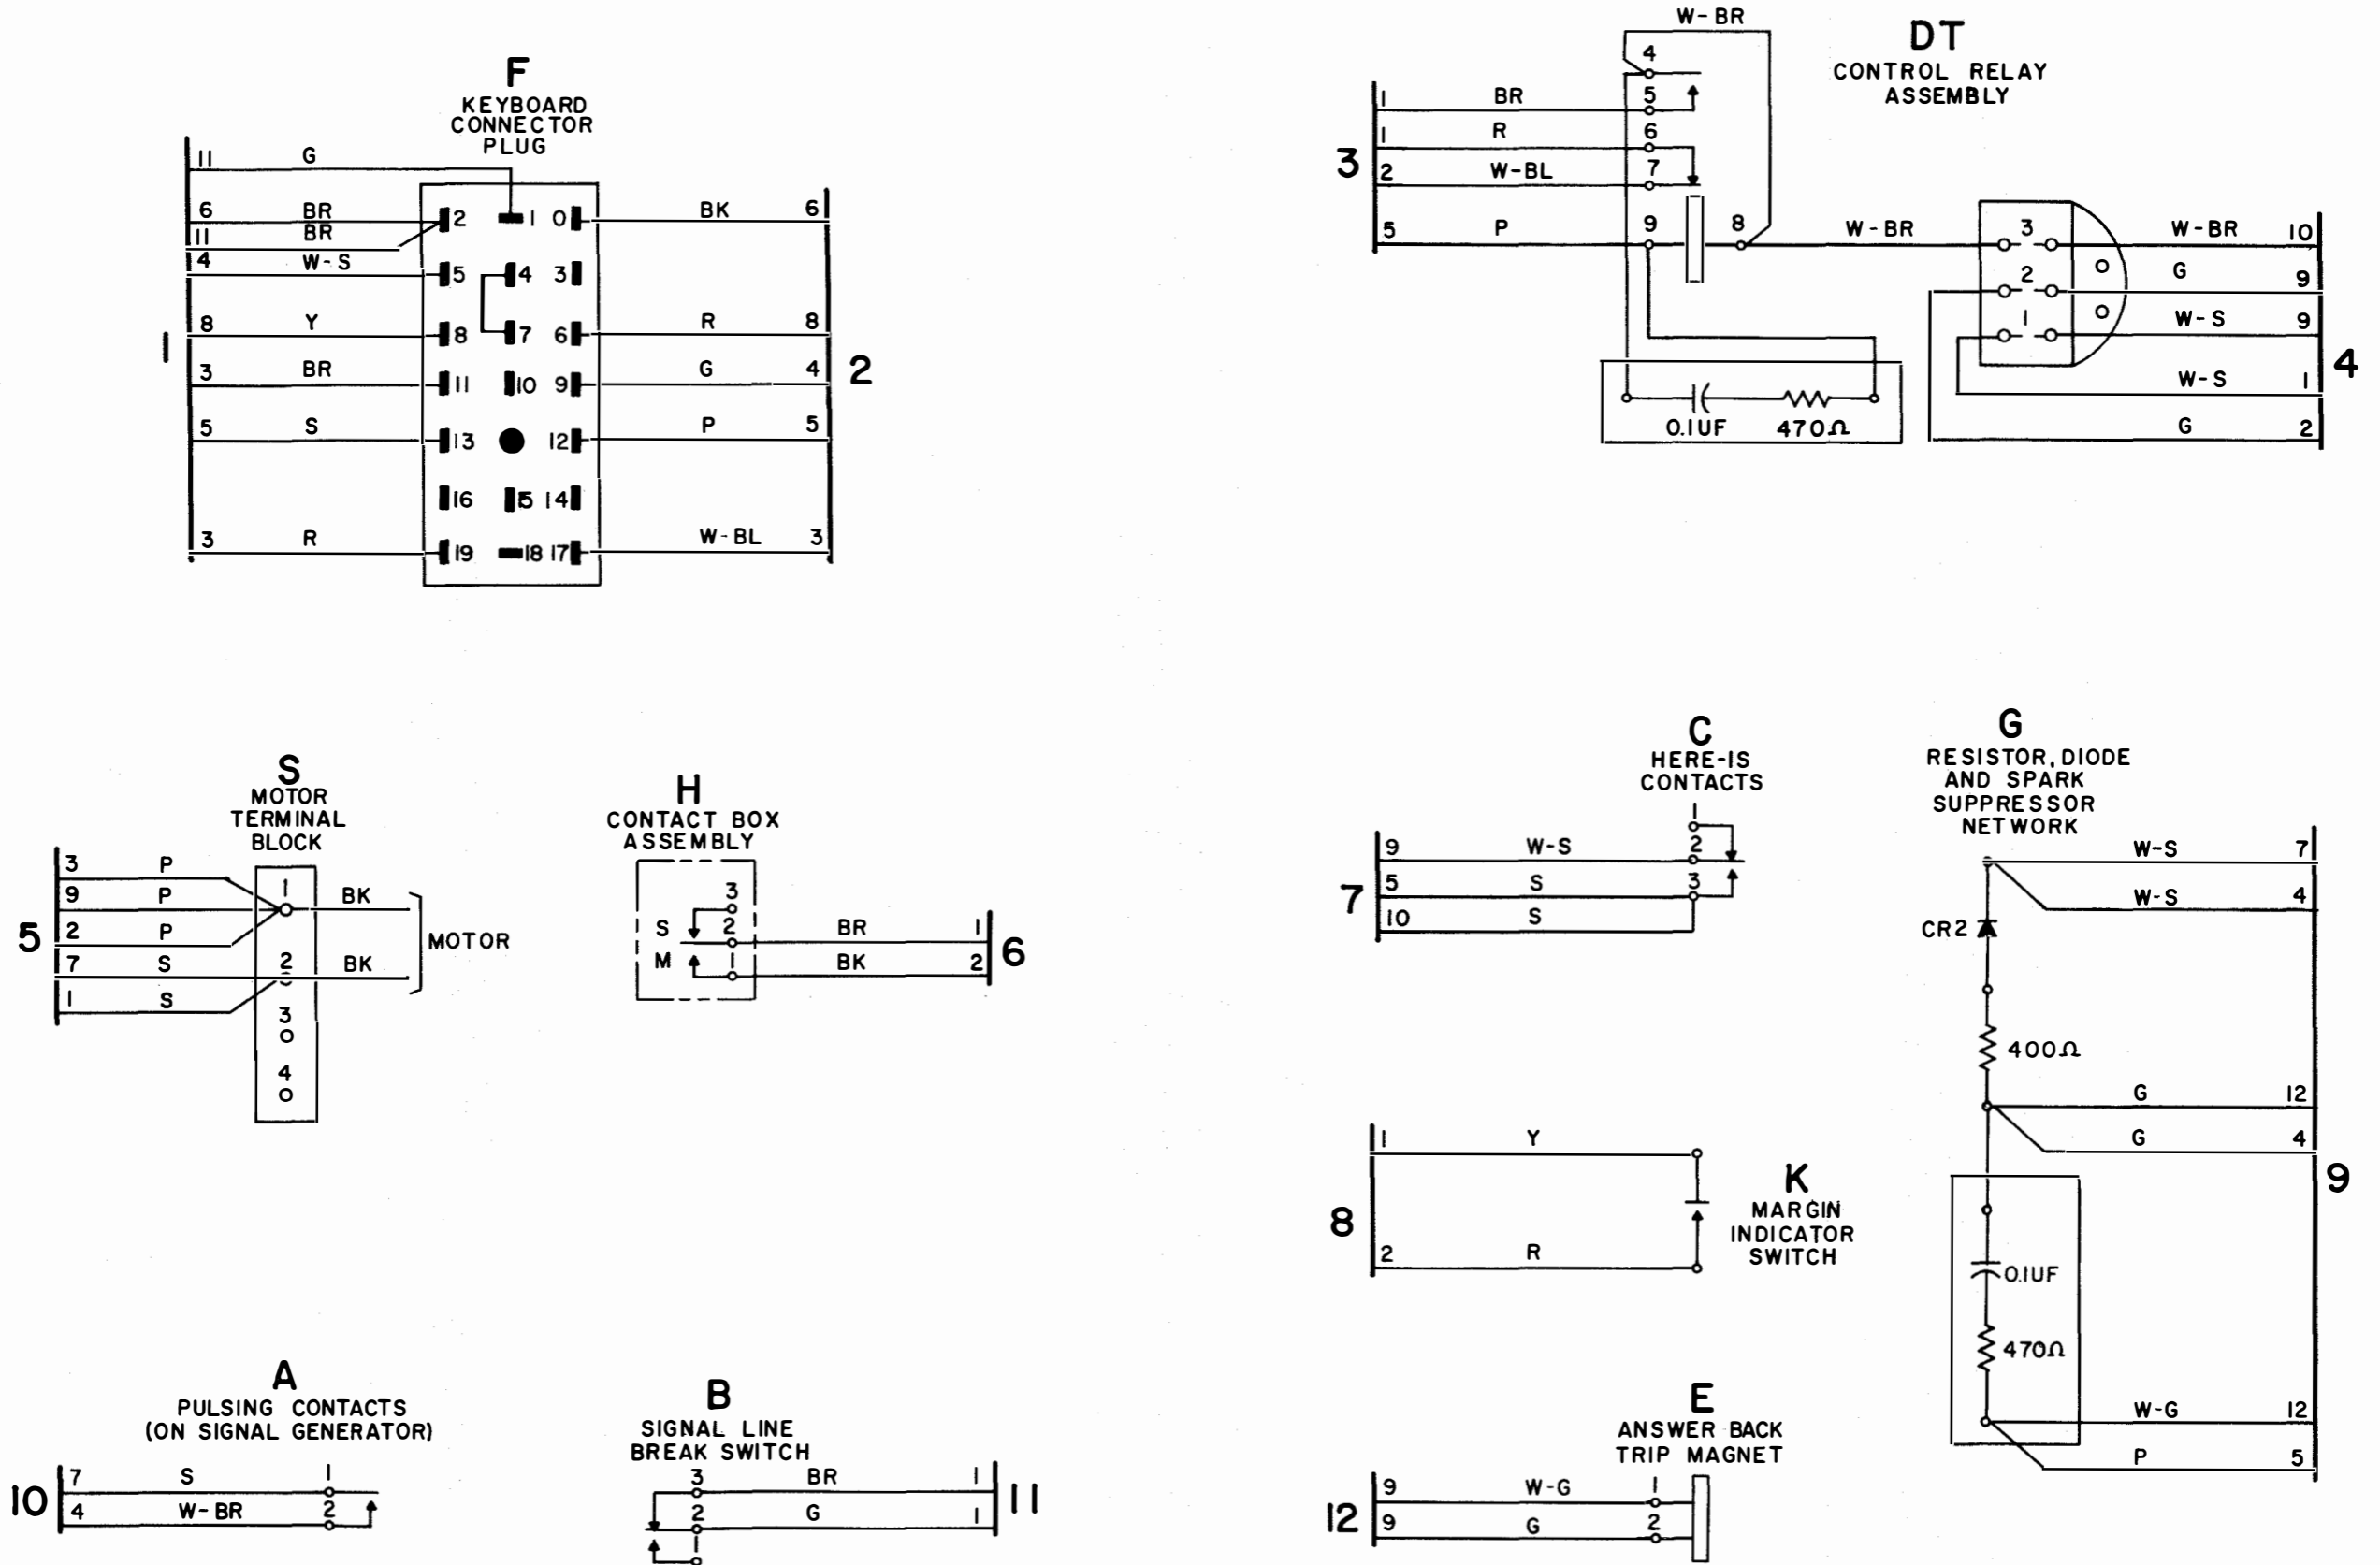


Figure 5 - 28H Teletypewriter Base

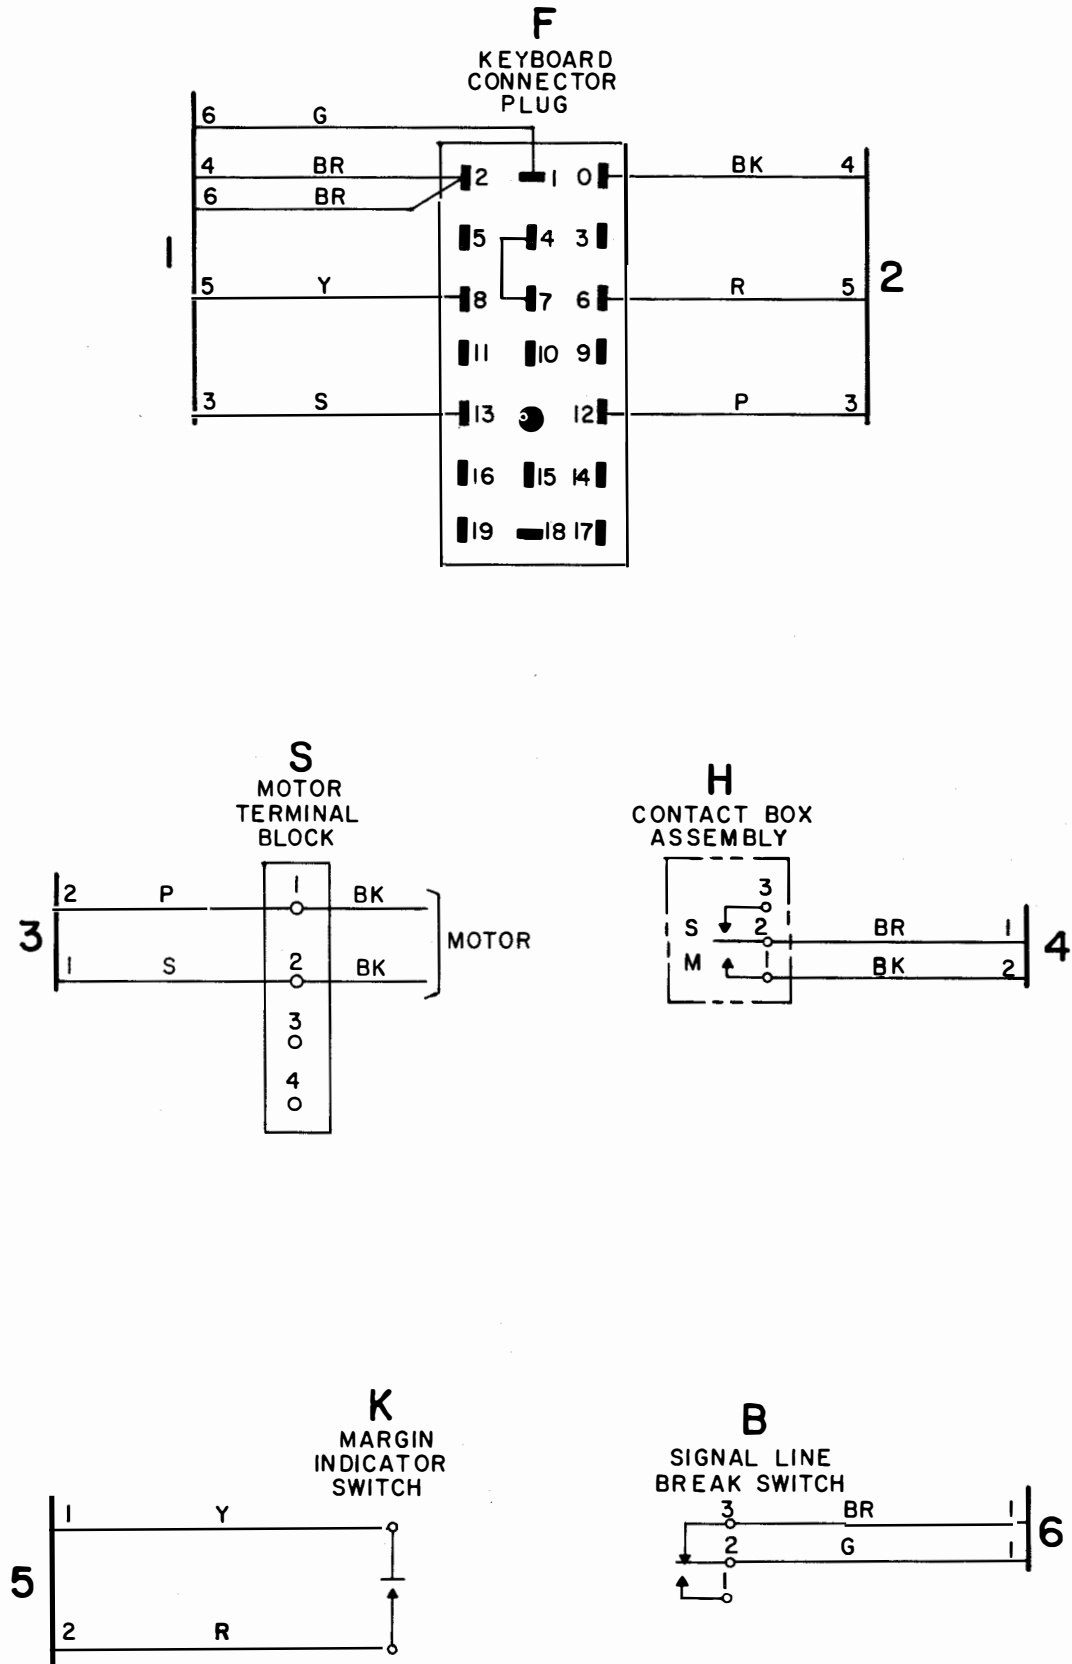


Figure 6 - 28H-1 Teletypewriter Base



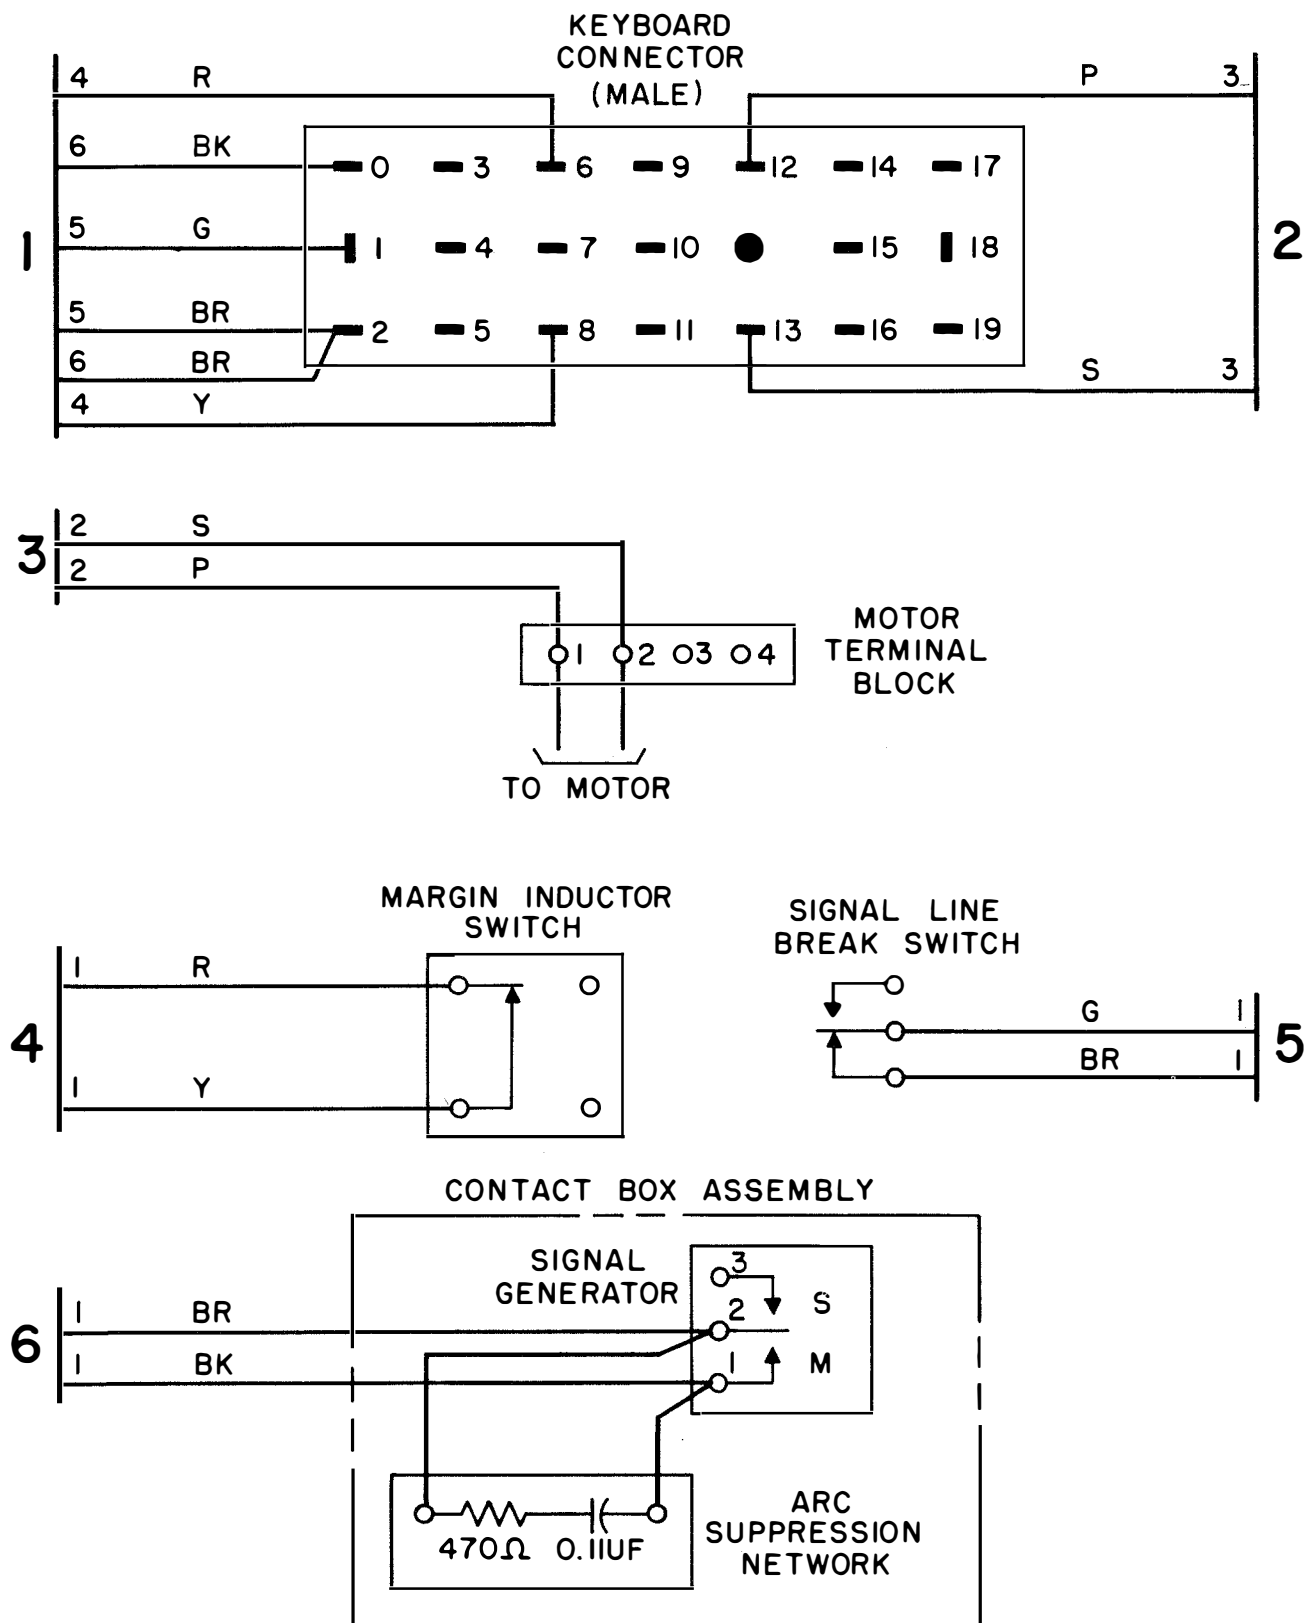


Figure 7 - 28J Teletypewriter Base


SIGNAL LINE  
BREAK SWITCH

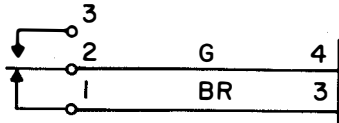



POWER SWITCH

 


MARGIN INDICATOR  
SWITCH

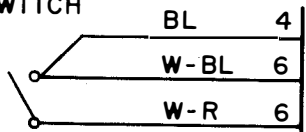


SIGNAL BELL

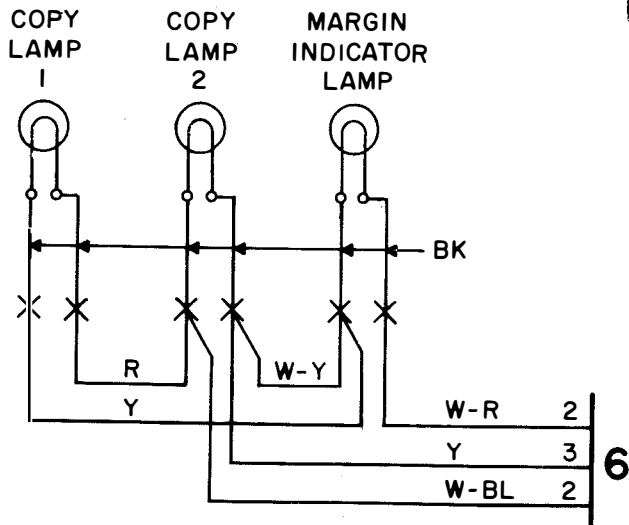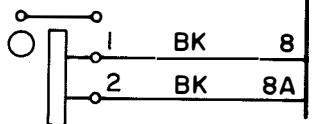

KEYBOARD CONNECTOR  
(MALE)

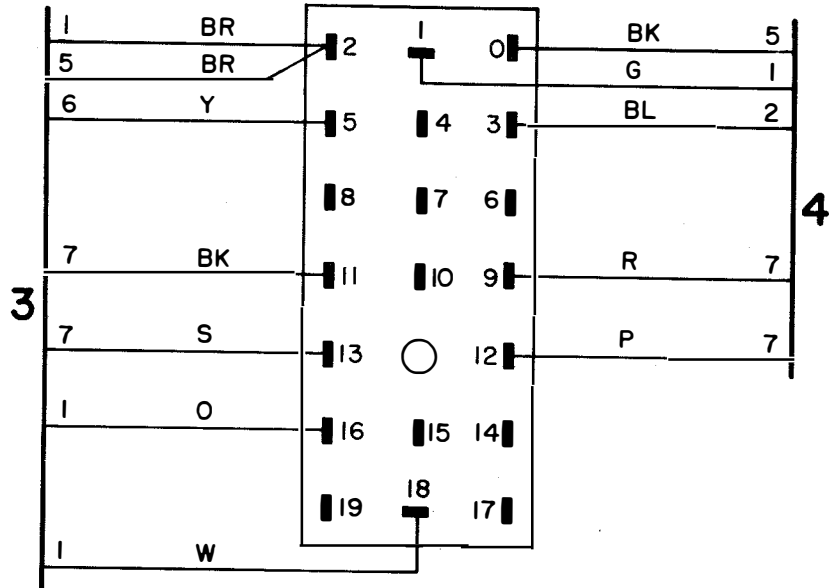

CONTACT BOX ASSEMBLY

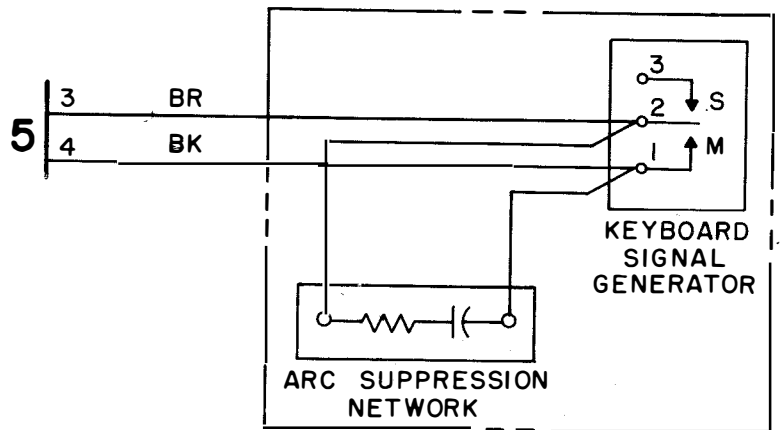

MOTOR  
TERMINAL BLOCK

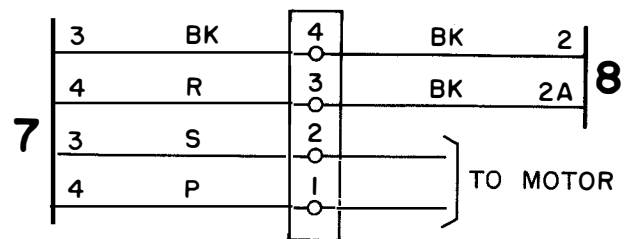


Figure 8 - 28K Teletypewriter Base

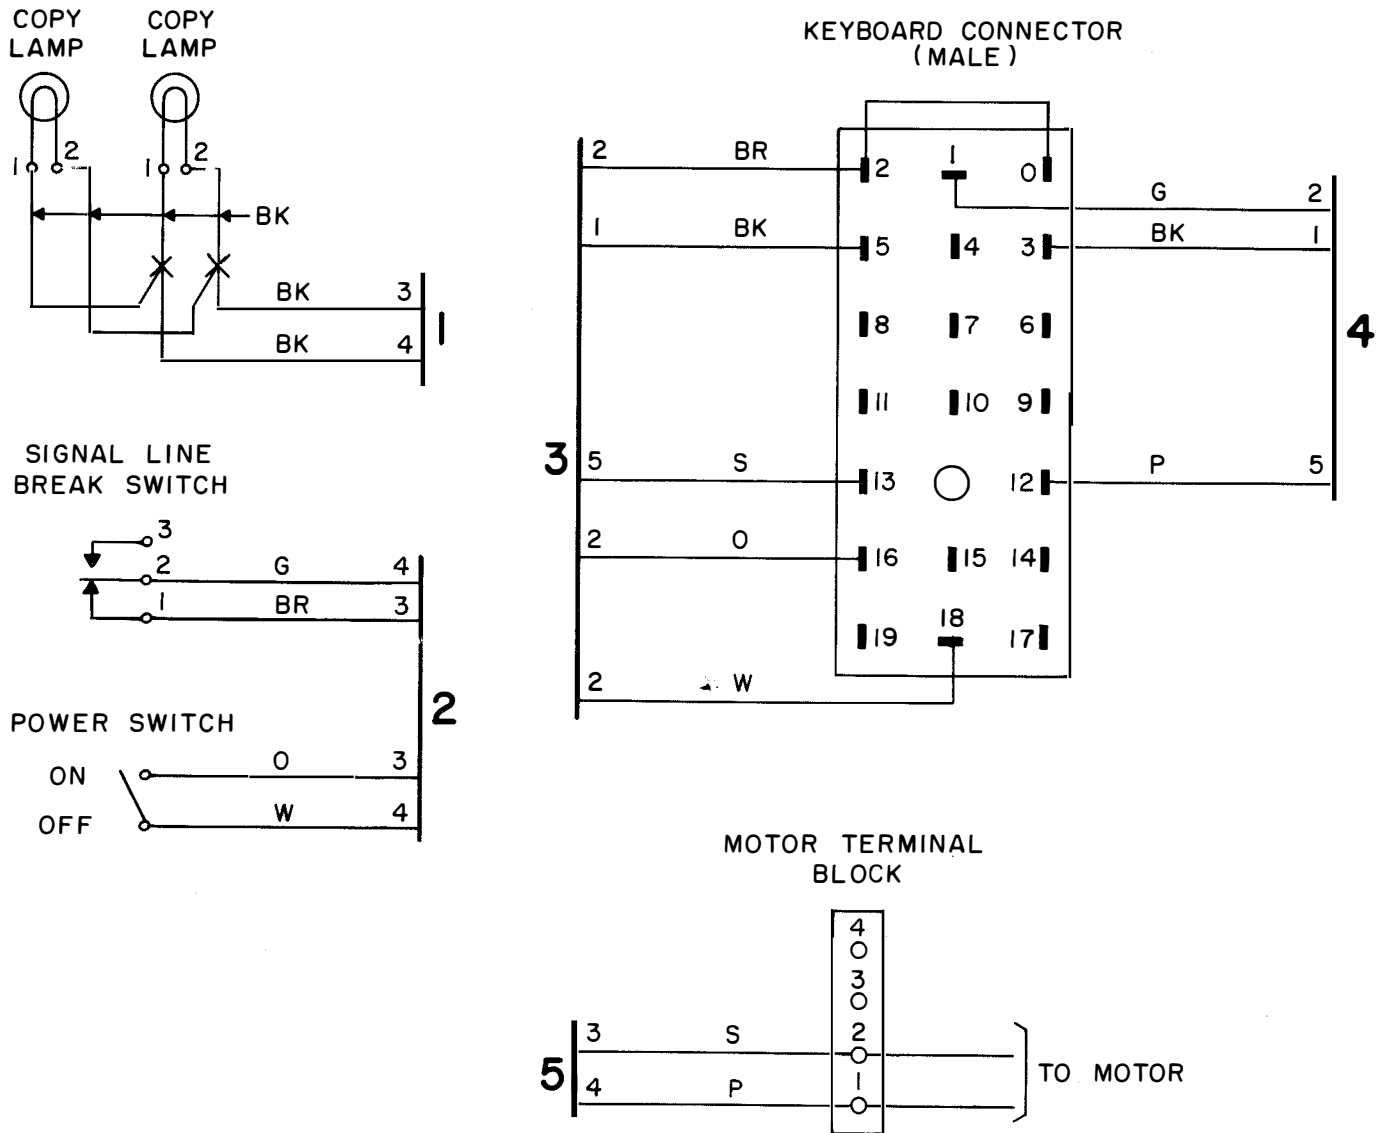


Figure 9 - 28L Teletypewriter Base