

INSTRUCTION MANUAL FOR
TELETYPE SEQUENTIAL CONTROL (SECO) SYSTEM

CONTENTS

Bulletin 201, Issue 1 -----	Sections
	I General Description
	II Theory of Operation
	III Installation and Initial Adjustments
	IV Operation
	V Maintenance
	VI Figures
Bulletin 120, Issue 7 - RY30 Relay -----	Adjustments
Bulletin 1044, Issue 4 - RY30 Relay -----	Parts Catalog
Bulletin 1141, Issue 1 - SECO System -----	Parts Catalog
Specification S-5565, Issue 1 -----	Modification of ASID Unit
Specification S-5288, Issue 1 -----	Lubrication Supplies and Directions for Use
Drawings	
WD-2453, Multiple Transmitter Distributor Set -----	Wiring Diagram
WD-2455, Primary Selector -----	Lever Arrangement
WD-2456, Secondary Selector -----	Lever Arrangement
WD-2460, Secondary Control Unit (Two Circuit) -----	Wiring Diagram
WD-2462, Secondary Control Unit (Single Circuit) -----	Wiring Diagram
WD-2463, ASID Unit -----	Schematic Wiring
WD-2464, Cabinet Set of Parts -----	Wiring Diagram
WD-2468, Primary Control Unit -----	Actual Wiring
WD-2473, Switching Panel -----	Wiring Diagram
WD-2474, Primary SECO -----	Simplified Wiring Diagram
WD-2514, Interconnecting Facilities -----	Block Diagram
WD-2524, SECO System -----	Timing Diagram