

CHANGES IN BULLETIN 138 (ISSUE 5)  
ADJUSTMENTS - TYPE BAR PAGE PRINTER  
MODEL 15

PAGE 9

TYPE BAR BACKSTOP ADJUSTMENT

Add "See Note (A)" to the title and change the wording of the adjustment as follows:

With the pull bar bail in its extreme rear position, there should be not less than .010" clearance between the type bar backstop and the pull bars when the type bars are held in the type bar guide. Make this check on the two end pull bars and the middle pull bar.

To adjust, set the up and down position of the type bar backstop by means of its elongated mounting holes to meet this requirement. (See Figure 7 for location of parts.)

NOTE: When meeting the clearance requirement between the backstop and the pull bars, the backstop should be positioned low enough to eliminate any enterderence between adjacent type bar assemblies at the pallet ends which would be likely to cause "light" printing.

It is preferable that the end type bars rest against the backstop buffer strip along its entire width. It is permissible, however, to allow a clearance of not more than .010" between the front edge of the buffer strip and the type bars.