

BELL SYSTEM PRACTICES
Teletypewriter and Data Stations

SECTION P34.313
Issue 2, October, 1961
AT&TCo Standard

28A-1 CABINET FOR MOUNTING SIX TYPING REPERFORATORS WIRING DIAGRAM

1. GENERAL


1.01 This section shows the wiring for the 28A-1 typing reperforator cabinet for mounting six typing reperforators.

1.02 This section is reissued to specify that the 28A-1 cabinet is a typing reperforator cabinet.

**28A-1 CABINET FOR
SIX TYPING
REPERF.
WIRING
DIAGRAM**

P34.313

Page 1

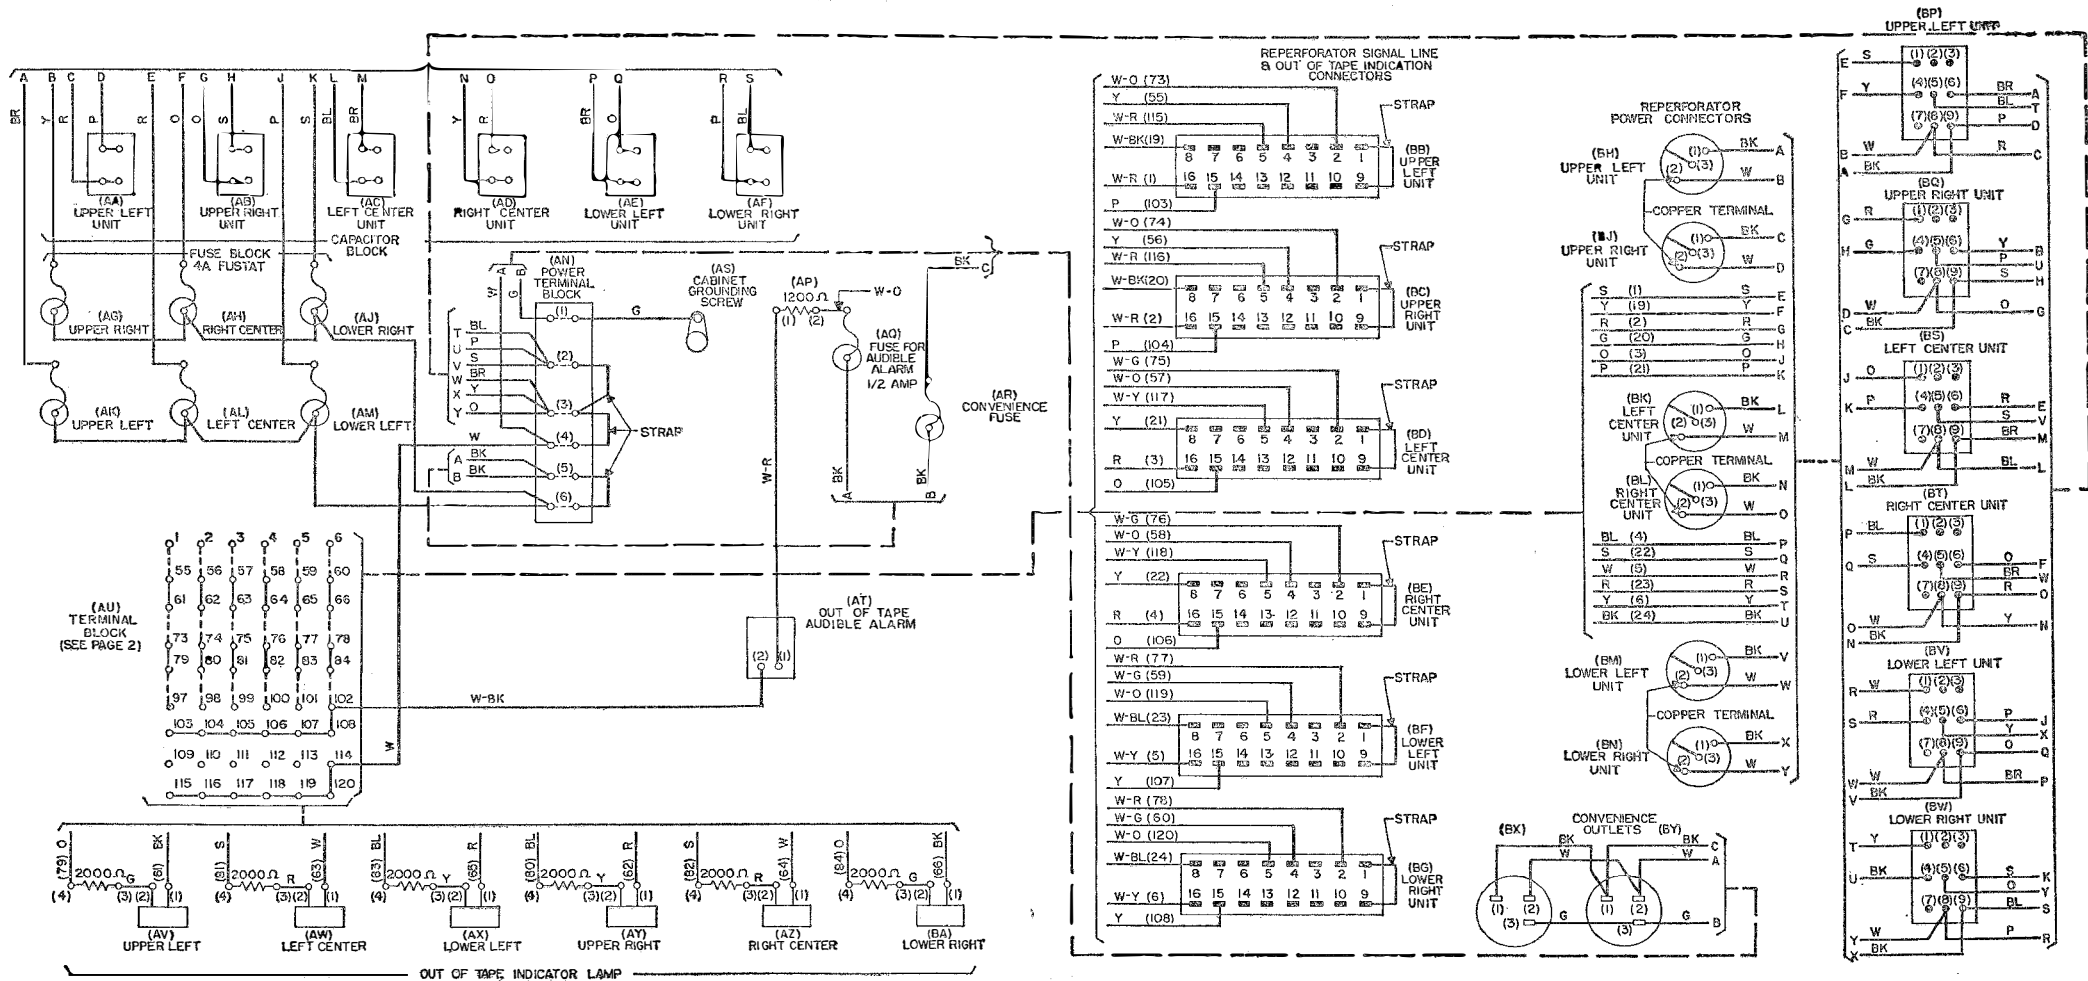

28A-1 Typing Reperforator Cabinet

NOTES:

- 1 UNIT WIRED FOR 115 VOLTS 50 TO 60 CYC. AC. POWER INPUT ONLY.
- 2 CONNECTORS VIEWED FROM SOLDER TERMINAL ENDS.
- 3 FUSE PROTECTION FOR CONVENIENCE OUTLET FUSETRON OR FUSTAT RATED AT 5.0 AMP.
- 4 TERMINAL DESIGNATIONS ENCLOSED IN PARENTHESIS ARE NOT MARKED ON COMPONENTS.
- 5 EXTERNAL SIGNAL LINE CONNECTIONS MADE TO LEFT SIDE OF 120-POINT TERMINAL BLOCK AS FOLLOWS:

TOP SHELF: LEFT REPERFORATOR AU-1 & AU-19
 RIGHT REPERFORATOR AU-2 & AU-20

CENTER SHELF: LEFT REPERFORATOR AU-3 & AU-21
 RIGHT REPERFORATOR AU-4 & AU-22

LOWER SHELF: LEFT REPERFORATOR AU-5 & AU-23
 RIGHT REPERFORATOR AU-6 & AU-24

COLOR	TERMINAL POINT	TERMINAL NUMBER	TERMINAL POINT	COLOR	LEADS CONNECTED TO RIGHT SIDE OF 120-POINT TERMINAL BLOCK											
W-R	BB-16	1	BP-1	S	25	BB-SPARE	W-BK	49			73	BB-2	W-O	97		
W-R	BC-16	2	BQ-1	R	26	BB-SPARE	W-R	50			74	BC-2	W-O	98		
R	BD-16	3	BS-1	O	27	BC-SPARE	W-G	51			75	BD-2	W-G	99		
R	BE-16	4	BT-1	BL	28	BC-SPARE	W-O	52			76	BE-2	W-G	100		
W-Y	BF-16	5	BV-1	W	29	BD-SPARE	W-BL	53			77	BF-2	W-R	101		
W-Y	BG-16	6	BW-1	Y	30	BD-SPARE	W-Y	54			78	BG-2	W-R	102	AT-2	W-BK
		7			31	BE-SPARE	W-BK	55	BB-4	Y	79	AV-4	O	103	BB-15	P
		8			32	BE-SPARE	W-R	56	BC-4	Y	80	AY-4	BL	104	BC-15	P
		9			33	BF-SPARE	W-G	57	BD-4	W-O	81	AW-4	S	105	BD-15	O
		10			34	BF-SPARE	W-O	58	BE-4	W-O	82	AZ-4	S	106	BE-15	O
		11			35	BG-SPARE	W-BL	59	BF-4	W-G	83	AX-4	BL	107	BF-15	Y
		12			36	BG-SPARE	W-Y	60	BG-4	W-G	84	BA-4	O	108	BG-15	Y
		13			37			61	AV-1	BK	85			109		
		14			38			62	AY-1	R	86			110		
		15			39			63	AW-1	W	87			111		
		16			40			64	AZ-1	W	88			112		
		17			41			65	AX-1	R	89			113		
		18			42			66	BA-1	BK	90			114	AN-4	W
W-BK	BB-8	19	BP-4	Y	43			67			91			115	BB-5	W-R
W-BK	BC-8	20	BQ-4	G	44			68			92			116	BC-5	W-R
Y	BD-8	21	BS-4	P	45			69			93			117	BD-5	W-Y
Y	BE-8	22	BT-4	S	46			70			94			118	BE-5	W-Y
W-BL	BF-8	23	BV-4	R	47			71			95			119	BF-5	W-O
W-BL	BG-8	24	BW-4	BK	48			72			96			120	BG-5	W-O

28A-1 Typing Reperforator Cabinet

28A-1 CABINET FOR
 SIX TYPING
 REPERF.

P34.313

Page 3
 3 Pages

WIRING
 DIAGRAM

